


# CORDLESS CIRCULAR SAW

## SX7500----A TYPE 1

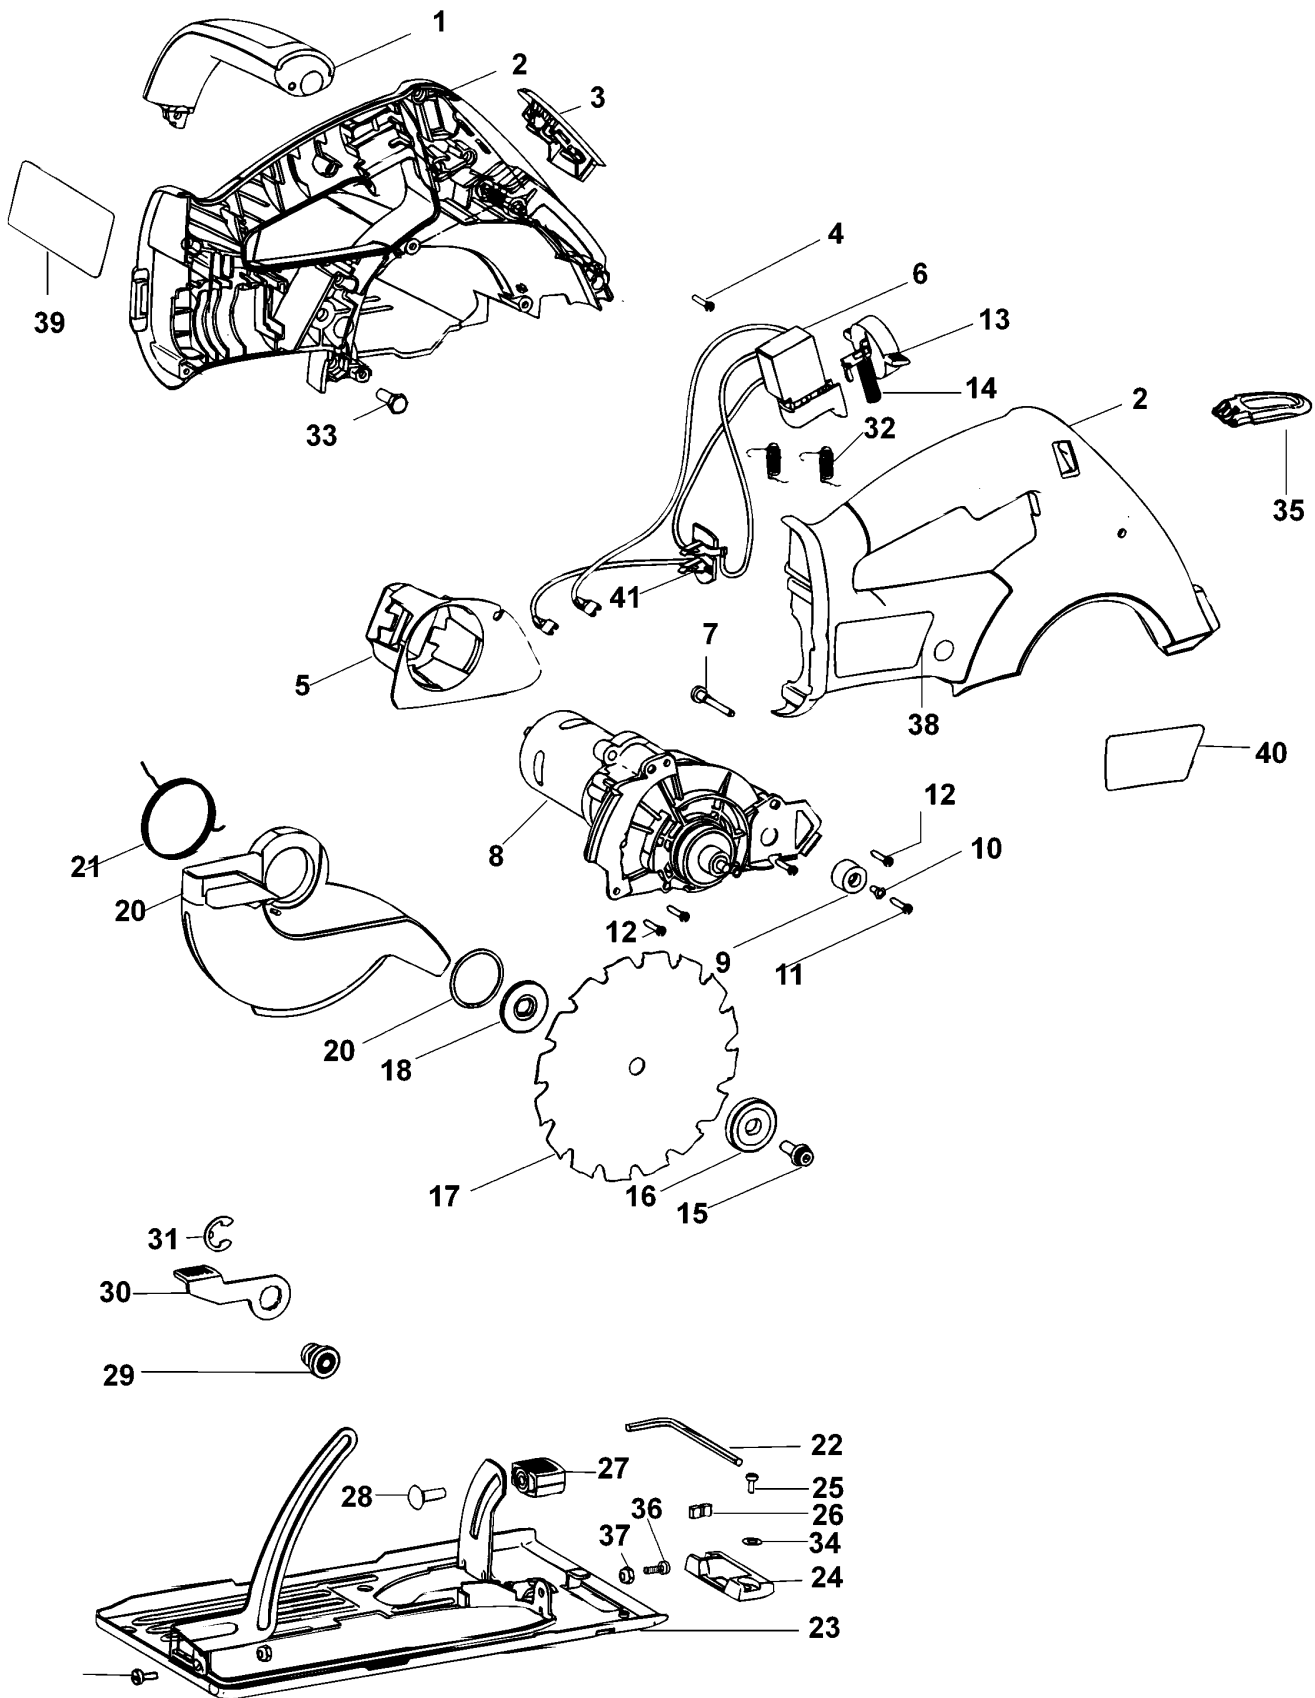

# CORDLESS CIRCULAR SAW

## SX7500----A TYPE 1



Pos. Nr	Ersatzteilnummer	Beschreibung	Preis	Variants
1	1	497492-00		GRIFF ZSB
2	1	499925-25		GEHAUSEPAAR
3	1	498175-00		RADKRANZ,LI+RE
KOMPL.ES55E				
4	2	486563-00		SCHRAUBE
5	1	497549-01		ABDECKUNG
6	1	497515-06		SCHALTER ZSB
7	1	497486-01		STIFT
8	1	497525-07		GETR.GEH.
9	1	497524-00		GUMMI
10	1	497577-00		OESE
11	1	498156-00		SCHRAUBE
12	10	497495-00		SCHRAUBE
13	1	497503-00		ANTRIEB
14	1	497504-02		DRUCKFEDER
15	1	497476-00		BOLZEN
16	1	497477-00		SCHEIBE AUSSEN
17	1	497569-03		MESSER
18	1	497478-00		UNTERLEGSCHIEBE
19	1	497479-00		HALTER
20	1	497480-00		UNTERER SCHUTZ
21	1	497481-03		FEDER
22	1	497570-02		SCHLUESSEL
23	1	497550-00		SCHUH ZSB
24	1	497552-00		ANZEIGER
25	1	497551-02		SCHRAUBE
26	1	497583-00		GUMMI
27	1	497915-00		KNOPF ZSB
28	1	497558-00		BOLZEN
29	1	497898-00		MUTTER
30	1	497576-01		HEBEL
31	1	497575-00		KLIP
32	2	5100035-03		FEDER
33	1	497485-00		BOLZEN
34	1	498513-00		UNTERLEGSCHIEBE
35	1	497900-01		FENSTER
36	1	497505-00		STIFT
37	1	497506-02		FEDER
38	1	497472-05		TYPENSCHILD JP
39	1	497423-27		AUFKLEBER JP
40	1	497474-00		SCHILD
41	1	5100034-00		ANSCHLUSSBLOCK