



# STICHSÄGE

# KS900SW---A

# TYPE

# 1



Pos. Nr	Ersatzteilnummer	Beschreibung	Preis	Variants
5	1	90514323	HALTERUNG	
6	1	90518917	PCB 230V	
7	1	585385-00	SCHALTER ZSB	
8	1	90517413	ANTRIEB	
9	1	90514375	KAMM	
10	1	90517396	KLEMME ZSB	
11	1	823954	UNTERLEGSCHEIBE	
12	1	795688	ROLLER	
13	1	90517366	GETRIEBE ZSB	
14	2	90516114	AUSGLEICHGEWICHT	
15	1	90516213	GABEL	
16	1	90514354	PLATTE DRUCK	
17	1	90514424	STIFT	
18	1	90517418	ROLLER ZSB	
19	1	90514324	SCHAUM	
20	1	90517308	FELD 230V	
21	1	90523334	ANKER ZSB	
22	2	90521673	KOHLE + FEDER	
23	2	582696-00	KOHLEKASTEN	
24	1	90517433	SCHUH ZSB	
25	1	90513772	HALTER	
26	1	90514216	UNTERLEGSCHEIBE	
27	1	90514219	BOLZEN	
28	1	582827-00	BOLZEN	
29	2	330019-00	SCHRAUBE	
30	1	90514228	EINSATZ	
31	1	90521871	FEDER	
32	1	90515286	BLOCK	
33	1	90514276	GRIFF	
34	1	90517427	HEBEL ZSB	
35	1	90501915	VAKUUMADAPTER	
36	1	90514628	KABELTUELLE	
37	1	90523264	KABELSATZ	GB
37	1	90518781	KABELSATZ (EURO)	QS
38	1	329301-00	KABELKLEMME	
39	2	370748	SCHRAUBE	
40	1	90514622	KNOPF	
41	1	326467-00	SPERRKLINKE	
42	1	330045-02	SCHRAUBE	
43	2	330019-17	SCHRAUBE	
44	9	330019-13	SCHRAUBE	
45	3	330045-01	SCHRAUBE	
46	2	330019-00	SCHRAUBE	
47	1	90521166	AUFKLEBER	
48	1	90514273	ANZEIGER	
49	1	90520107	SCHILD	
50	1	90520273	AUFKLEBER	
51	1	90521533	TYPENSCHILD	
52	1	90521787	SCHILD	
53	1	90521788	SCHILD	