


# MODEL 465604x50A

# REPAIR PARTS CHASSIS & HOOD

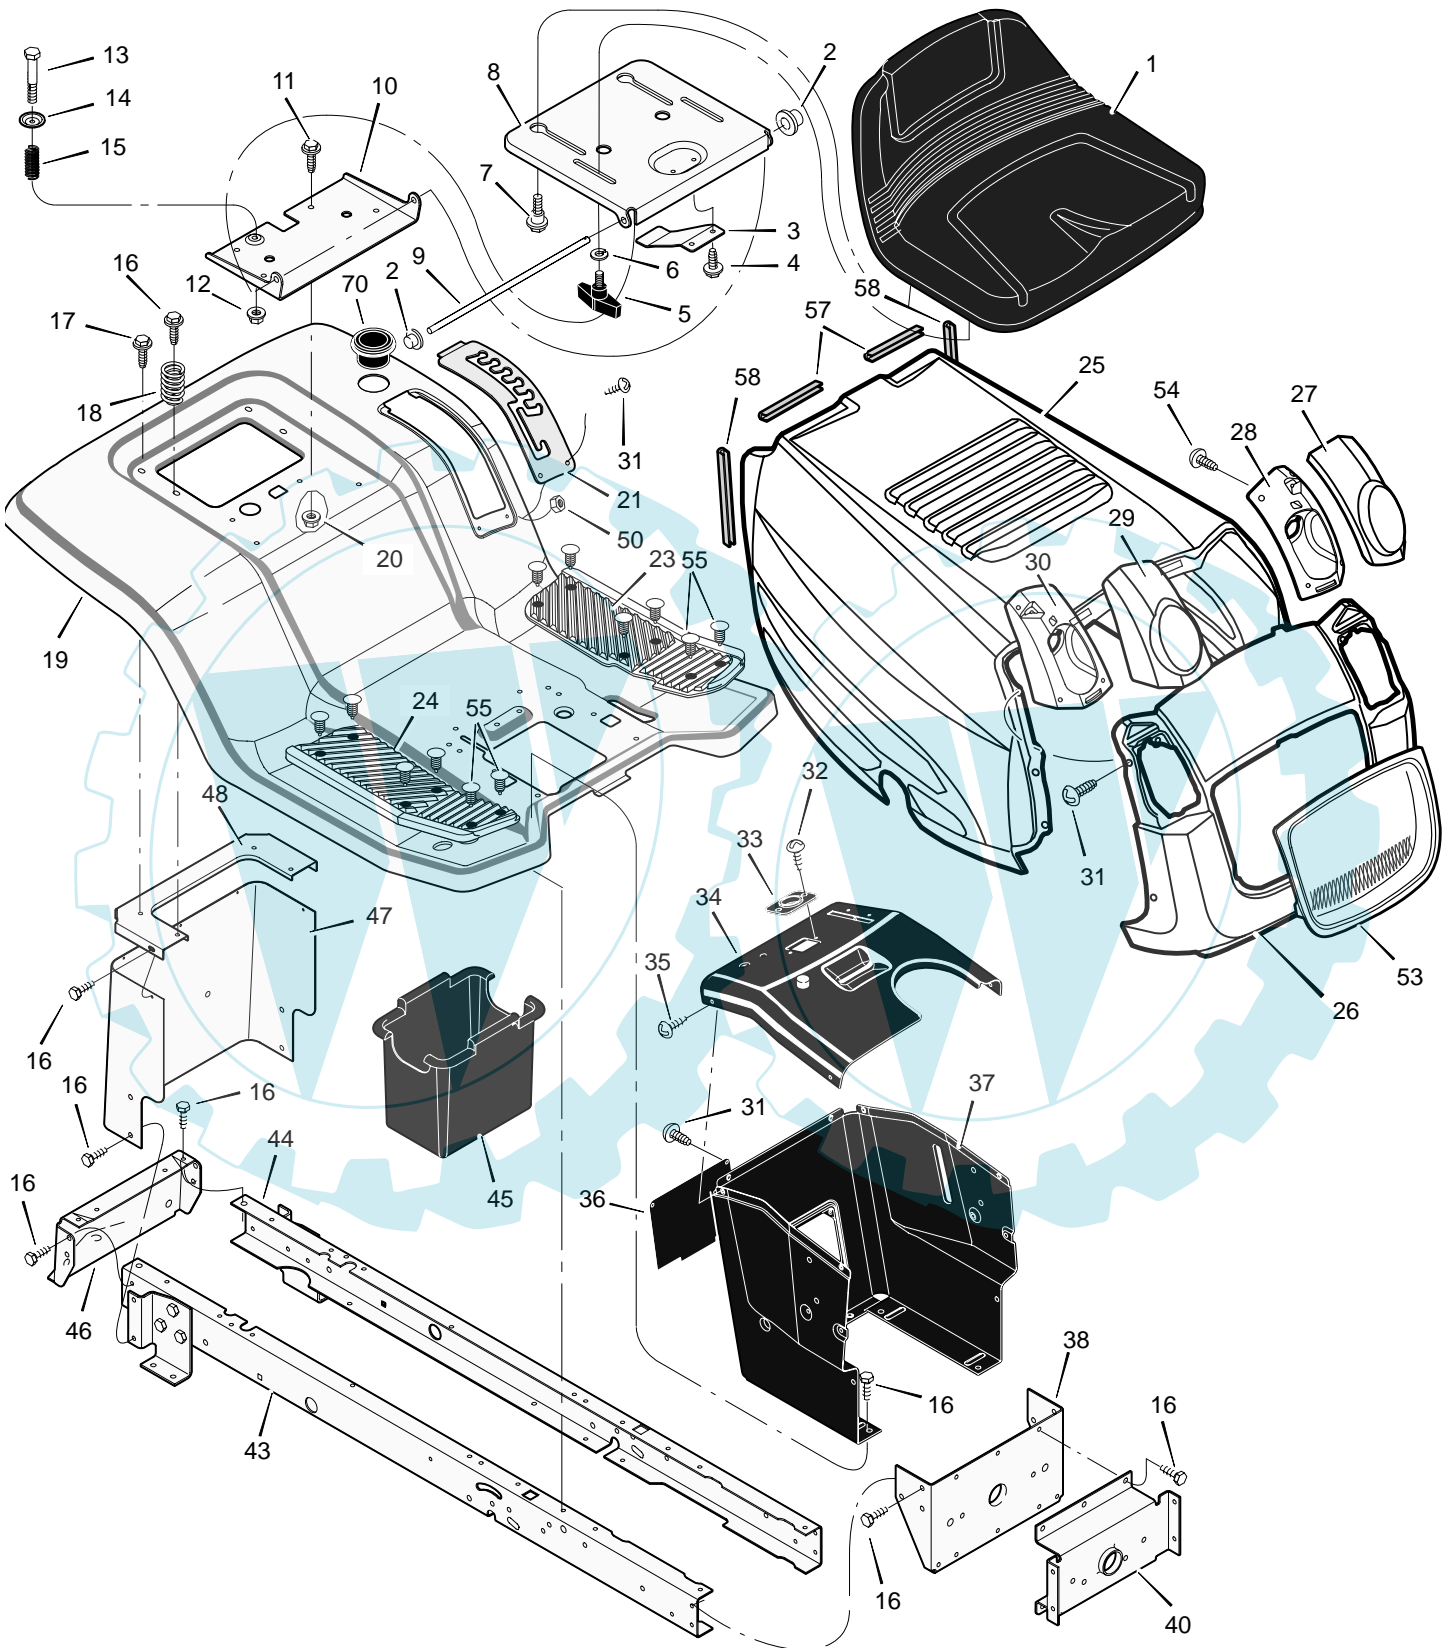


# MODEL 465604x50A

# REPAIR PARTS CHASSIS & HOOD

Key No.	Part No.	Description	Key No.	Part No.	Description
1	095236	Seat	28	1001550	Housing, Left Headlamp
2	028x23	Cap, Push On	29	1001551	Lens, Right
3	094057	Spring	30	1001549	Housing, Right Headlamp
4	26x229	Screw	31	26x270	Screw
5	1001054	Bolt, Wing	32	26x238	Screw
6	017x47 Z	Washer	33	1001491	Bearing, Steering
7	009x56	Bolt, Shoulder	34	1001593E717	Dash
8	094154E700	Support, Seat	35	26x201	Screw
9	094156 Z	Rod, Pivot	36	093007E700	Panel, Access
10	1001648E700	Bracket, Pivot	37	095318E717	Support, Dash
11	001x45	Bolt	38	1001270E700	Bracket, Rear Hanger
12	015x89	Nut	40	094007E700	Axle, Hanger
13	009x55	Bolt, Shoulder	43	1001268E700	Frame, Right
14	094155 Z	Washer	44	1001269E700	Frame, Left
15	164x31	Spring	45	690424	Container, Battery
16	26x249	Screw	46	1001002E700	Plate, Hitch
17	26x263	Screw	47	690218E700	Plate, Rear
18	164x30	Spring	48	094186E700	Top, Rear Plate
19	1001556E245	Deck, Seat	50	015x81	Nut
20	15x123	Nut	53	1001541	Insert, Grille
21	094886E700	Plate, Index	54	26x259	Screw
22	009x47	Screw	55	311087	Clip, Gray
23	095437	Mat, Left	57	1001652	Trim, Hood (3.75")
24	095438	Mat, Right	58	1001653	Trim, Hood (6.5")
25	1001537E245	Hood	70	1001542	Holder, Cup
26	1001533E717	Grille	--	F-030761L	Instruction Book & Parts List
27	1001552	Lens, Left			

# MODEL 465604x50A

# REPAIR PARTS DRIVE ASSEMBLY

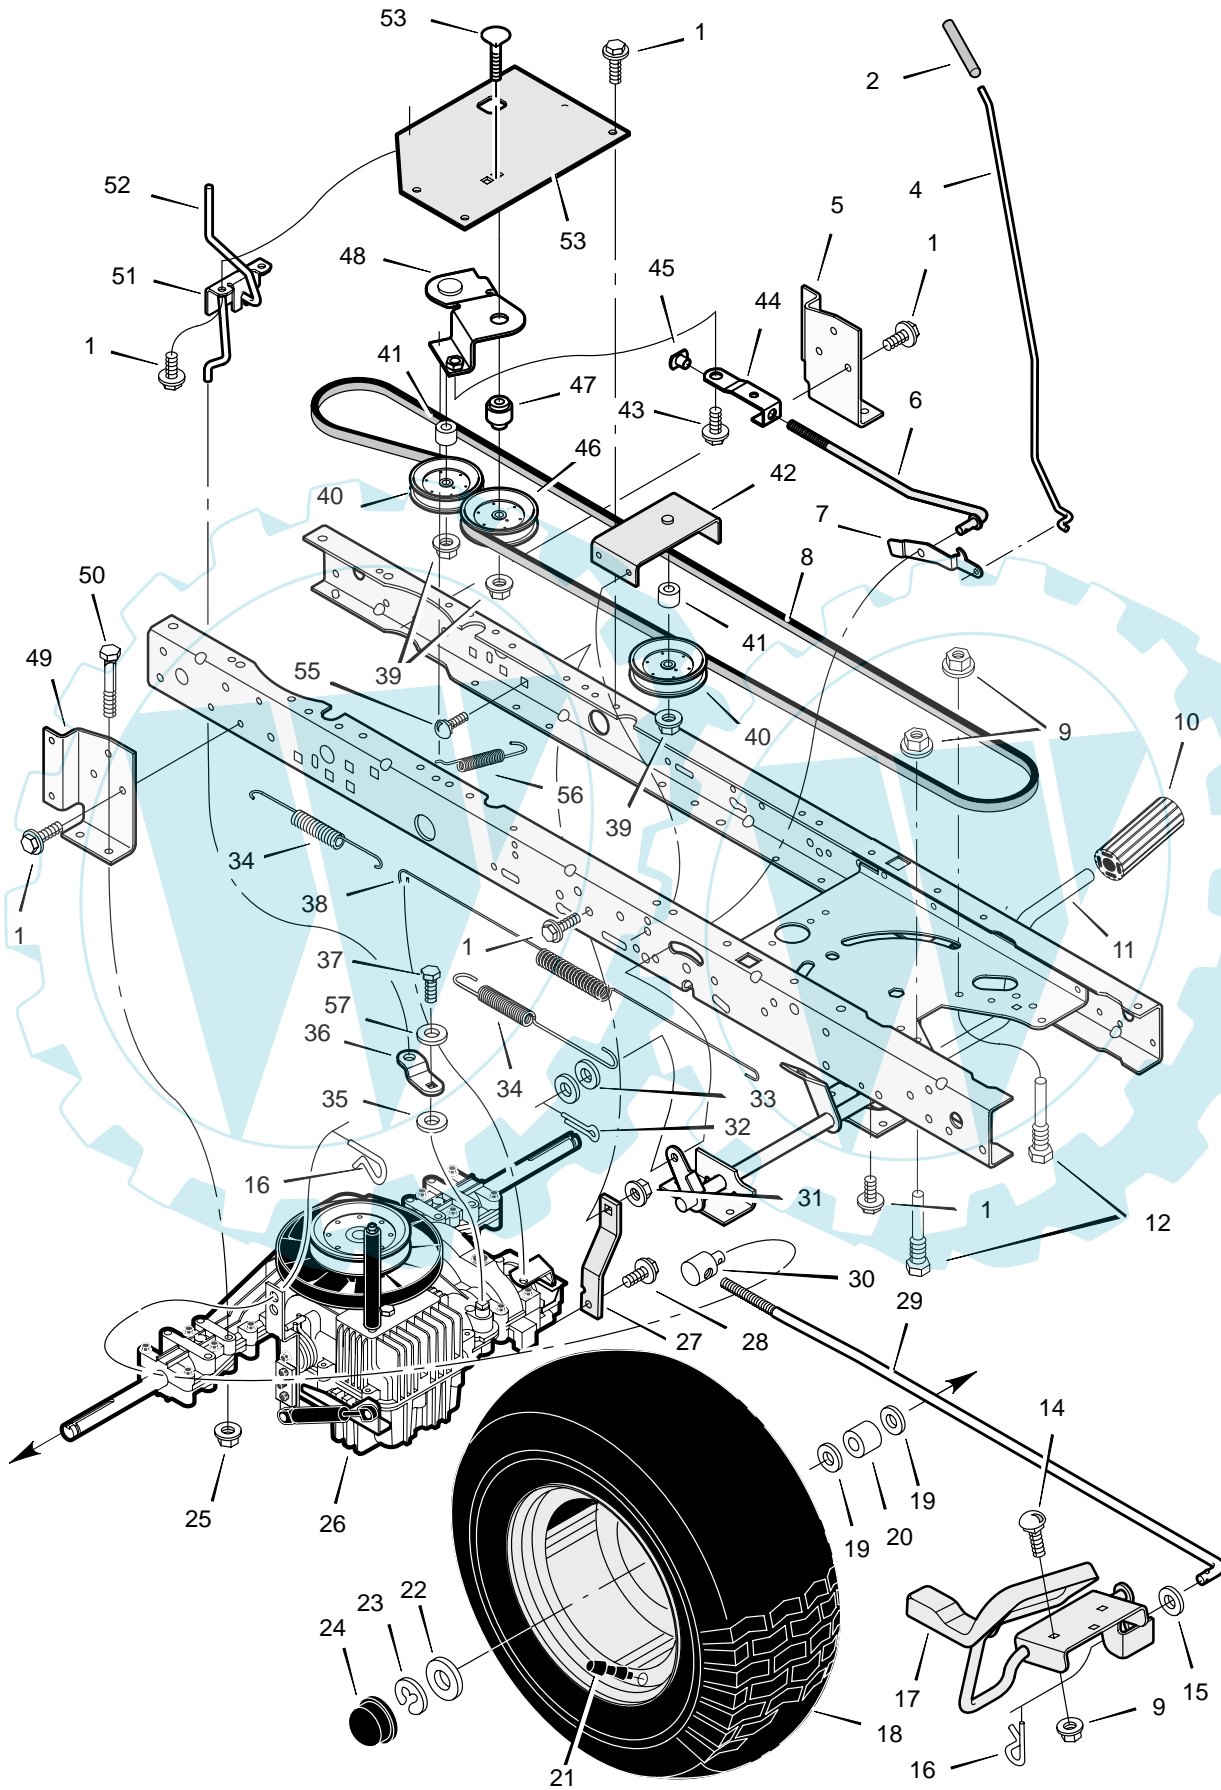

# MODEL 465604x50A

# REPAIR PARTS DRIVE ASSEMBLY


Key No.	Part No.	Description	Key No.	Part No.	Description
1	26x249	Screw	30	092132	Nut, Adjusting
2	091079	Grip, Parking Brake	31	015x84	Nut, Centerlock
4	1001245 Z	Rod, Parking Brake	32	030x20	Pin, Cotter
5	094185E700	Bracket, Left Transaxle	33	017x48	Washer
6	1001013 Z	Rod, Clutch	34	165x92	Spring, Extension
7	094045 Z	Latch, Parking Brake	35	17x148	Washer
8	37x106	V-Belt, Drive	36	1001086 Z	Arm, Disconnect
9	015x79	Nut, Flange	37	06x105	Capscrew
10	021544	Pedal, Brake/Clutch	38	165x150	Spring, Brake
11	1001011E700	Assembly, Brake Pedal	39	015x98	Locknut, Flange
12	094384	Screw, Guide	40	690409	Pulley, Idler
14	002x53	Bolt, Carriage	41	690369	Spacer
15	017x57	Washer	42	1001097	Bracket, Idler Assembly
16	0031x4	Pin, Hair	43	009x49	Bolt, Shoulder
17	1001231E700	Pedal Assembly, Hydro	44	1001007 Z	Link, Clutch
18	092300-601	Wheel & Tire Ass'y, Rear	45	1001014	Nut, Tee
- -	024430	Tire ONLY *	46	690410	Pulley, Idler
- -	407049	Tube ONLY	47	1001012	Bushing, Pivot
19	17x160	Washer	48	1001018 Z	Arm Assembly, Idler
20	690554 Z	Spacer	49	094184E700	Bracket, Right Transaxle
21	024373	Stem, Valve	50	01x155	Bolt, Hex
22	17x195	Washer	51	1001214 Z	Bracket, Disconnect
23	0011x3	E-Ring	52	1001215 Z	Rod, Disconnect
24	094618	Cap, Hub	53	1001108	Bracket, Idler Pivot
25	015x88	Nut, Centerlock	54	002x92	Bolt, Carriage
26	**	Transaxle	55	002x78	Bolt, Carriage
27	1001085	Strap, Torque	56	165x155	Spring, Clutch
28	26x216	Screw	57	017x38	Washer
29	1001234 Z	Rod, Control			

\* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

\*\* For information on Replacement Parts see the Central Parts Distributor in your area.

MODEL 465604x50A

REPAIR PARTS  
STEERING

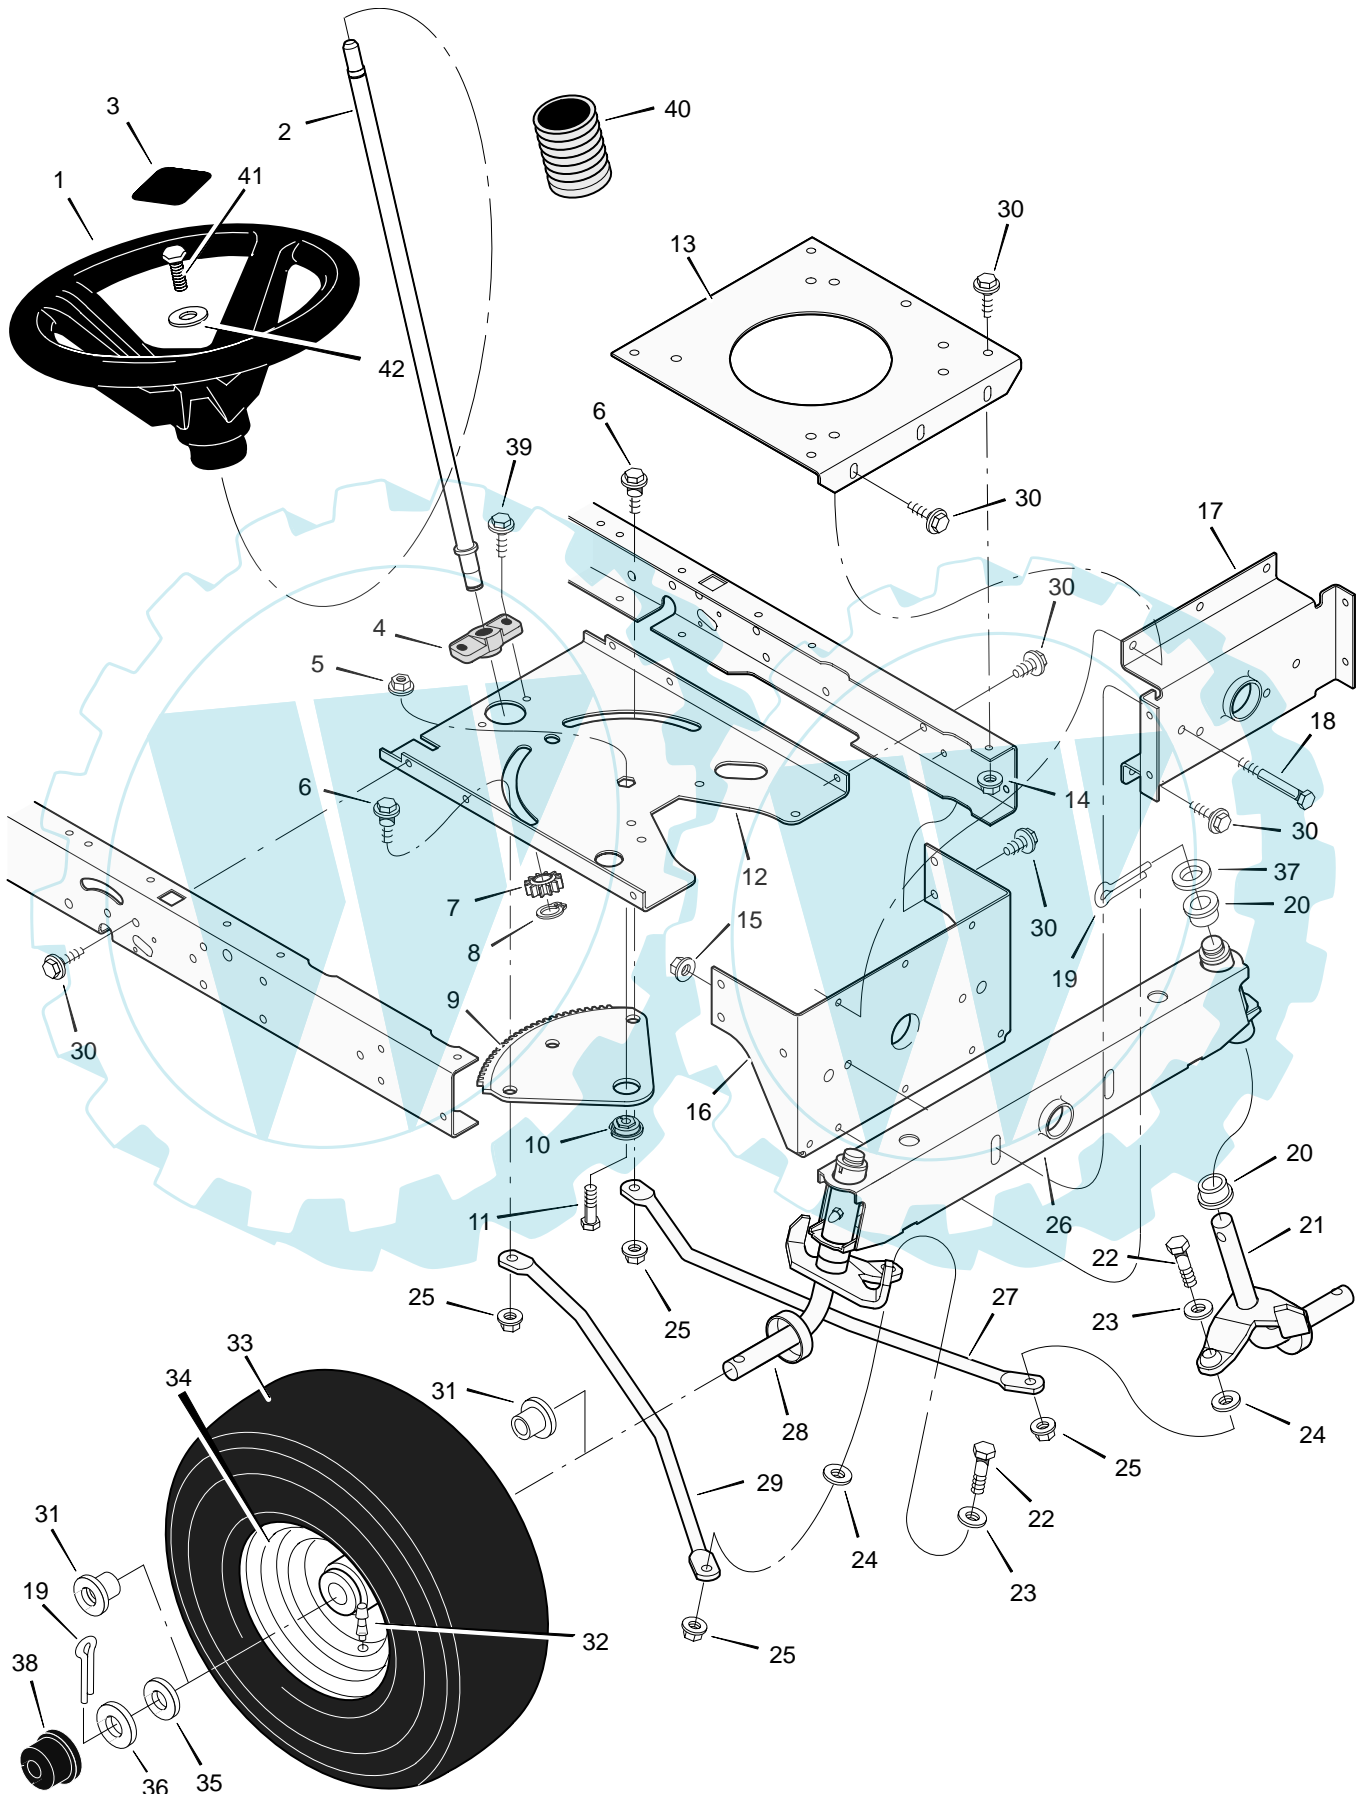

F-030761L

124



# MODEL 465604x50A


# REPAIR PARTS STEERING

Key No.	Part No.	Description	Key No.	Part No.	Description
1	095184	Wheel, Steering	23	17x104	Washer
2	690625	Post, Steering	24	017x53 Z	Washer
3	711325	Insert, Steering Wheel	25	015x84	Nut, Flange
4	094124	Bearing	26	1001460E700	Axle Assembly
5	15x111	Nut, Flange	27	095329E700	Drag Link, Left
6	009x57	Bolt, Shoulder	28	094575E700	Spindle Assembly, Right
7	690183E700	Gear, Pinion	29	095328E700	Drag Link, Right
8	011x25	Ring, Snap	30	26x249	Screw
9	094121E700	Gear, Sector	31	091334	Bearing, Wheel
10	094123	Bearing	32	024373	Stem, Valve
11	001x84	Bolt	33	024380	Tire *
12	1001121E700	Plate, Steering	--	407924	Tube
13	094006E700	Plate, Engine	34	094581-601	Wheel and Tire Assembly
14	015x88	Nut, Flange	35	17x195	Washer
15	15x118	Nut, Flange	36	17x192	Washer
16	1001270E700	Bracket, Hanger	37	17x113	Washer
17	094007E700	Axle, Hanger	38	094618	Hub Cap
18	01x146	Bolt	39	26x267	Screw
19	030x49	Pin, Cotter	40	092059	Bellows
20	690150	Bearing	41	0025x3	Bolt
21	094576E700	Spindle Assembly, Left	42	17x146	Washer
22	01x111	Bolt			

\* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.


MODEL 465604x50A

REPAIR PARTS  
MOWER HOUSING SUSPENSION

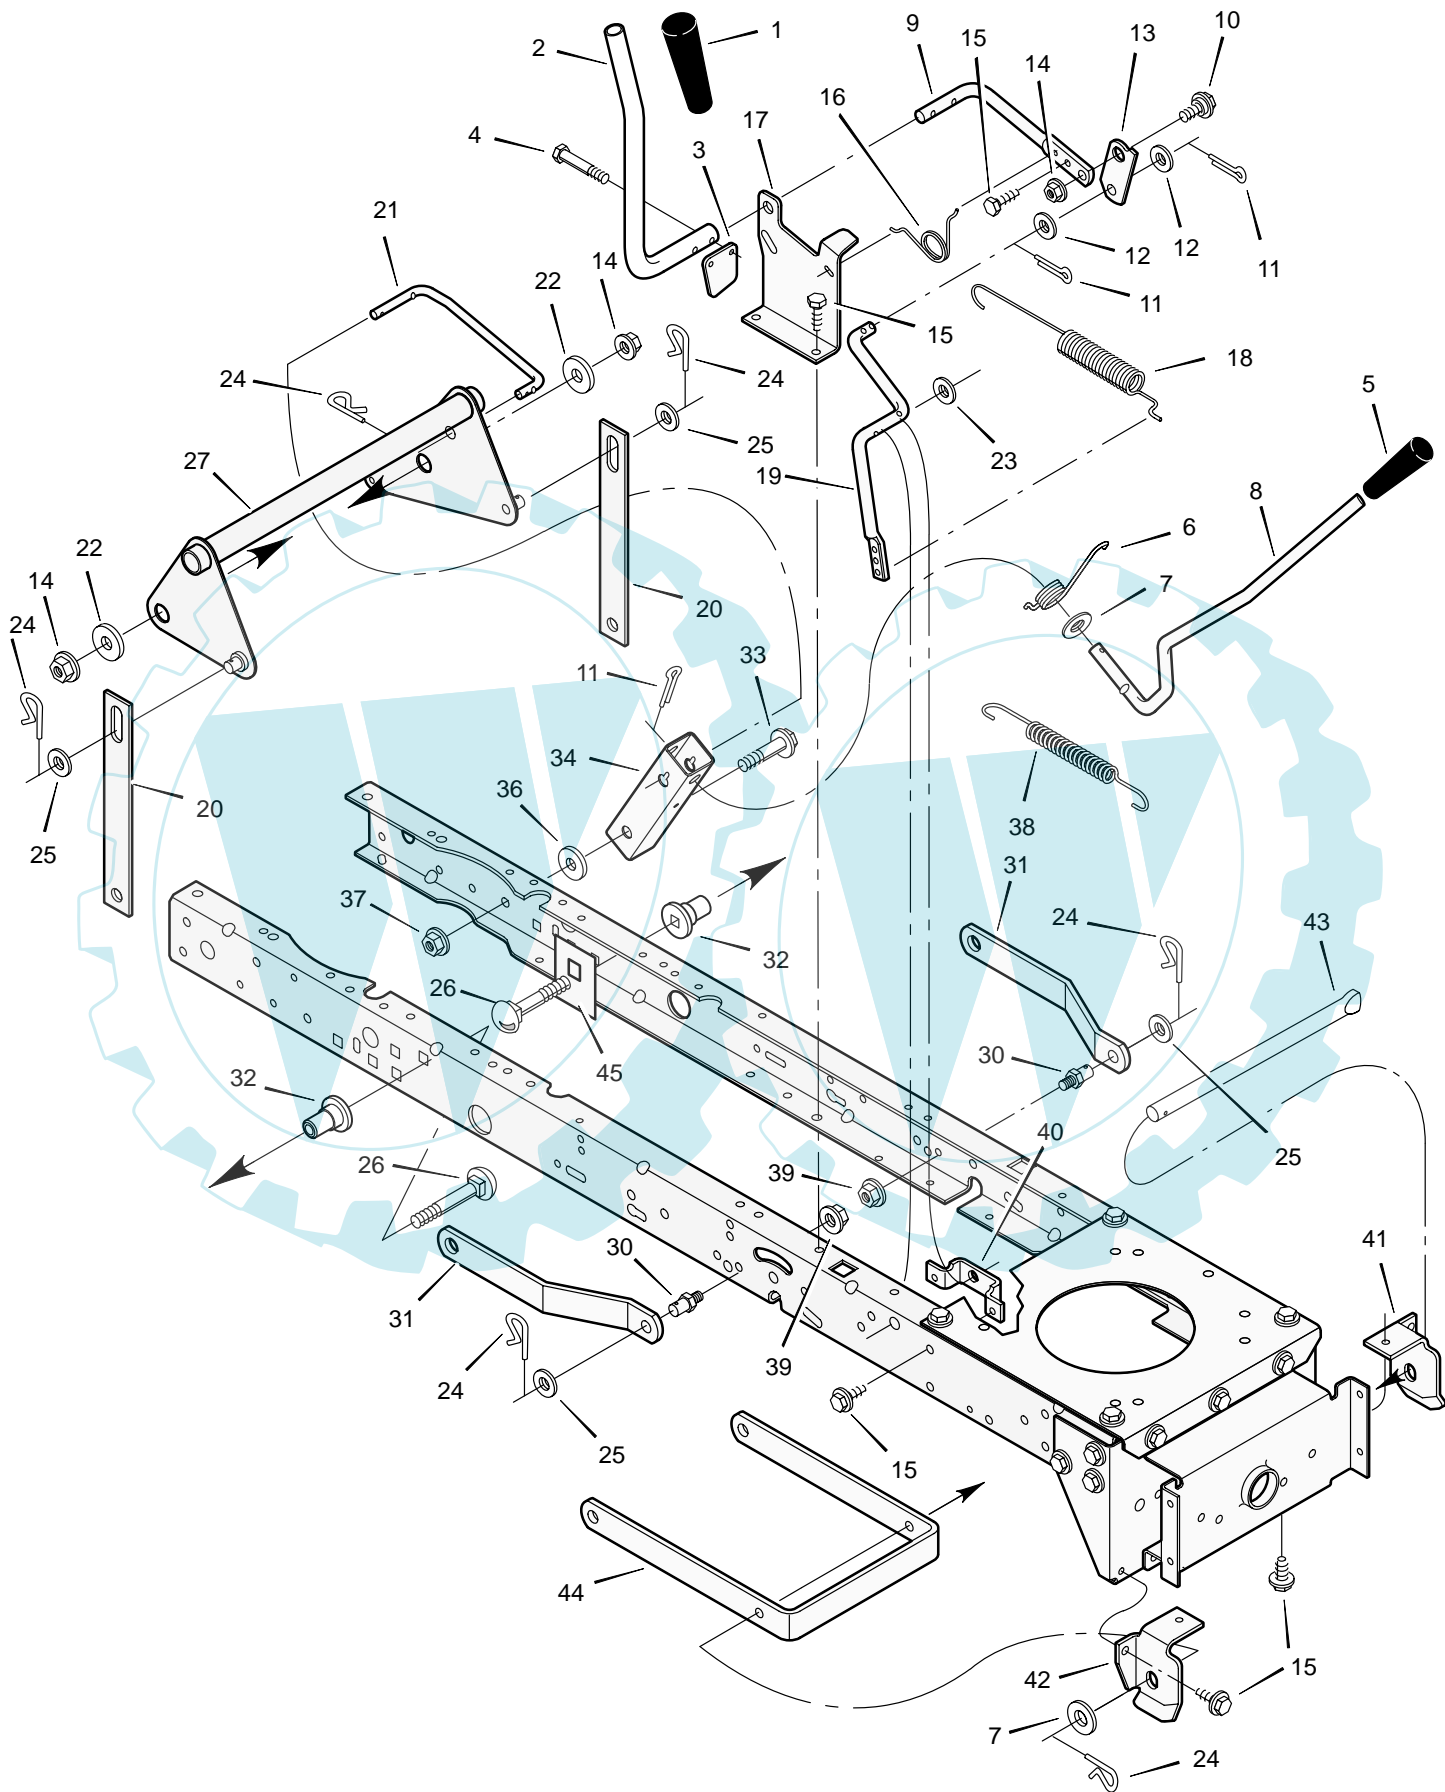

# MODEL 465604x50A

# REPAIR PARTS MOWER HOUSING SUSPENSION

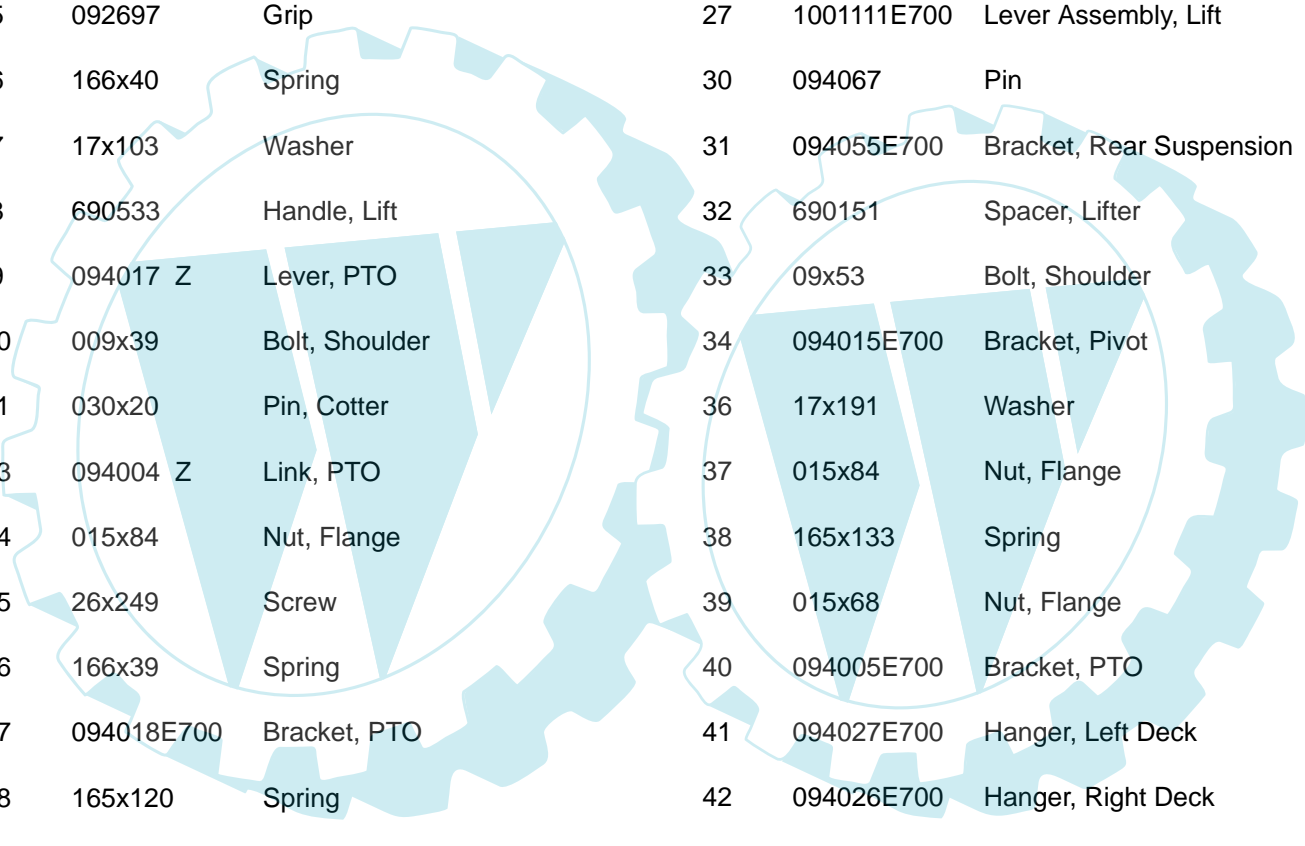


Key No.	Part No.	Description	Key No.	Part No.	Description
1	092698	Grip, PTO	23	017x57	Washer
2	094826 Z	Handle, PTO	24	0031x4	Pin, Hair
3	094022 Z	Pad, Switch	25	017x91	Washer
4	0025x3	Bolt	26	002x85	Bolt, Carriage
5	092697	Grip	27	1001111E700	Lever Assembly, Lift
6	166x40	Spring	30	094067	Pin
7	17x103	Washer	31	094055E700	Bracket, Rear Suspension
8	690533	Handle, Lift	32	690151	Spacer, Lifter
9	094017 Z	Lever, PTO	33	09x53	Bolt, Shoulder
10	009x39	Bolt, Shoulder	34	094015E700	Bracket, Pivot
11	030x20	Pin, Cotter	36	17x191	Washer
13	094004 Z	Link, PTO	37	015x84	Nut, Flange
14	015x84	Nut, Flange	38	165x133	Spring
15	26x249	Screw	39	015x68	Nut, Flange
16	166x39	Spring	40	094005E700	Bracket, PTO
17	094018E700	Bracket, PTO	41	094027E700	Hanger, Left Deck
18	165x120	Spring	42	094026E700	Hanger, Right Deck
19	690394E700	Crank, PTO	43	094158 Z	Rod, Hanger
20	690212E700	Link, Lift	44	690539E700	Bracket, Suspension
21	690122E700	Link, Lift Handle	45	1001098E700	Plate, Stiffening
22	17x168	Washer			



# MODEL 465604x50A

# REPAIR PARTS MOWER HOUSING

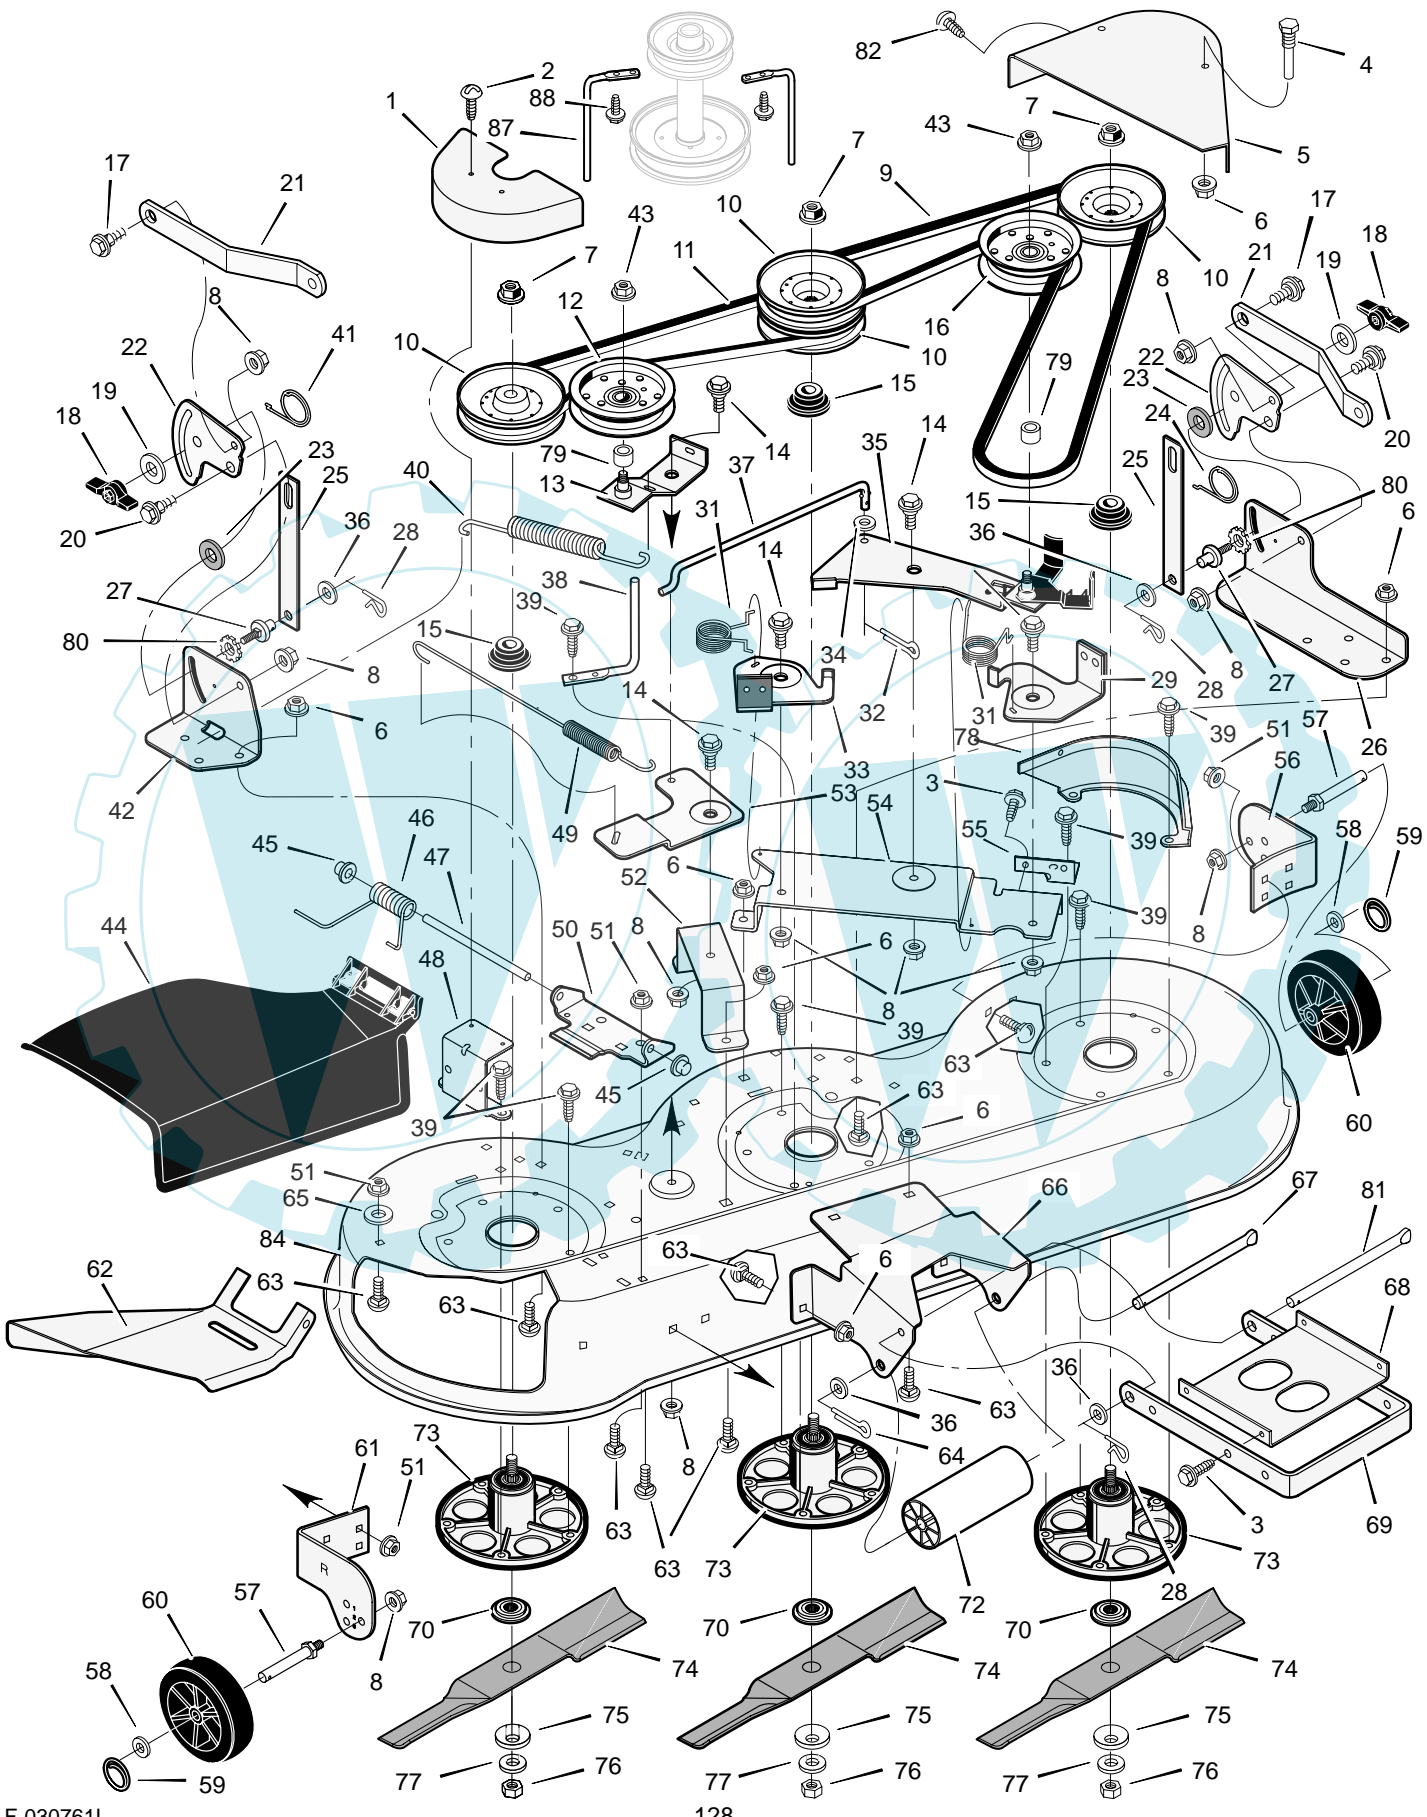

F-030761L

128

# MODEL 465604x50A


# REPAIR PARTS MOWER HOUSING

Key No.	Part No.	Description	Key No.	Part No.	Description
1	094607E700	Cover, Right Pulley	44	092100	Deflector, Chute
2	26x250	Screw	45	028x23	Push On Cap
3	26x249	Screw	46	166x34	Spring, Torsion
4	091754 Z	Guide, Belt	47	092159 Z	Rod, Deflector
5	094645E700	Cover, Left Pulley	48	092140E700	Bracket, Cover
6	015x79	Nut, Hex	49	165x120	Spring, Extension
7	15x140	Nut, Flange	50	092104E700	Bracket, Hinge
8	015x84	Nut, Flange	51	015x88	Nut, Flange
9	037x89	Belt, Primary	52	094601E700	Bracket, Bell Crank
10	094592	Pulley	53	094603E700	Crank, Bell
11	037x66	Belt, Secondary	54	094596E700	Plate, Brake Arm
12	690549	Pulley, Idler	55	094602E700	Bracket, Brake Plate
13	094639	Arm, Idler	56	094919E700	Bracket, Left Gauge Wheel
14	009x39	Bolt, Shoulder	57	094025	Axle
15	1001197	Spacer, Pulley	58	017x91 Z	Washer
16	690387	Pulley, Idler	59	031x11	Ring, Locking
17	009x52	Bolt, Shoulder	60	092683	Wheel, Gauge
18	094068	Knob	61	094918E700	Bracket, Right Gauge Wheel
19	017x45 Z	Washer	62	092103E700	Deflector, Inside
20	009x51	Bolt, Shoulder	63	002x53	Bolt, Carriage
21	094055E700	Bracket, Rear Suspension	64	030x49	Pin, Cotter
22	094128E700	Plate, Suspension	65	017x57	Washer
23	094137	Pad, Friction	66	094997E700	Bracket, Front Deck
24	166x43	Spring	67	094996	Rod, Hanger
25	690212E700	Link, Lift	68	094604E700	Stiffener
26	094600E700	Bracket, Left Lift	69	690539E700	Bracket, Suspension
27	095194	Pin, Hanger	70	690411	Adapter, Blade
28	0031x4	Pin, Hair	72	1001252	Roller
29	094640E700	Brake Assembly, Left	73	1001200	Housing, Jackshaft
31	166x41	Spring	74	1001508E701	Blade
32	030x20	Pin, Cotter	75	17x166	Washer, Belleville
33	094641E700	Brake Assembly, Right	76	15x100	Nut
34	017x47 Z	Washer	77	17x165	Washer
35	690579E700	Idler, Arm	78	690221E700	Bracket, Pulley Cover
36	17x103	Washer	79	690369	Spacer
37	094606 Z	Link, Bell Crank	80	019x35	Washer
38	092116 Z	Guide, Belt	81	094996	Rod, Hanger
39	0025x7	Screw	82	26x277	Screw
40	165x79	Spring, Extension	84	094936E700	Housing, Blade *
41	166x42	Spring, Torsion	1-84	776008	Complete Mower Housing Assembly
42	094598E700	Bracket, Suspension	87	091797 Z	Guide, Belt
43	015x98	Nut	88	025x15	Screw

\* Includes Key No. 17, 18, 30, 31, 32, 33, 45, 46, 53, 54, 55, and 56.

MODEL 465604x50A

REPAIR PARTS  
ENGINE MOUNT ASSEMBLY

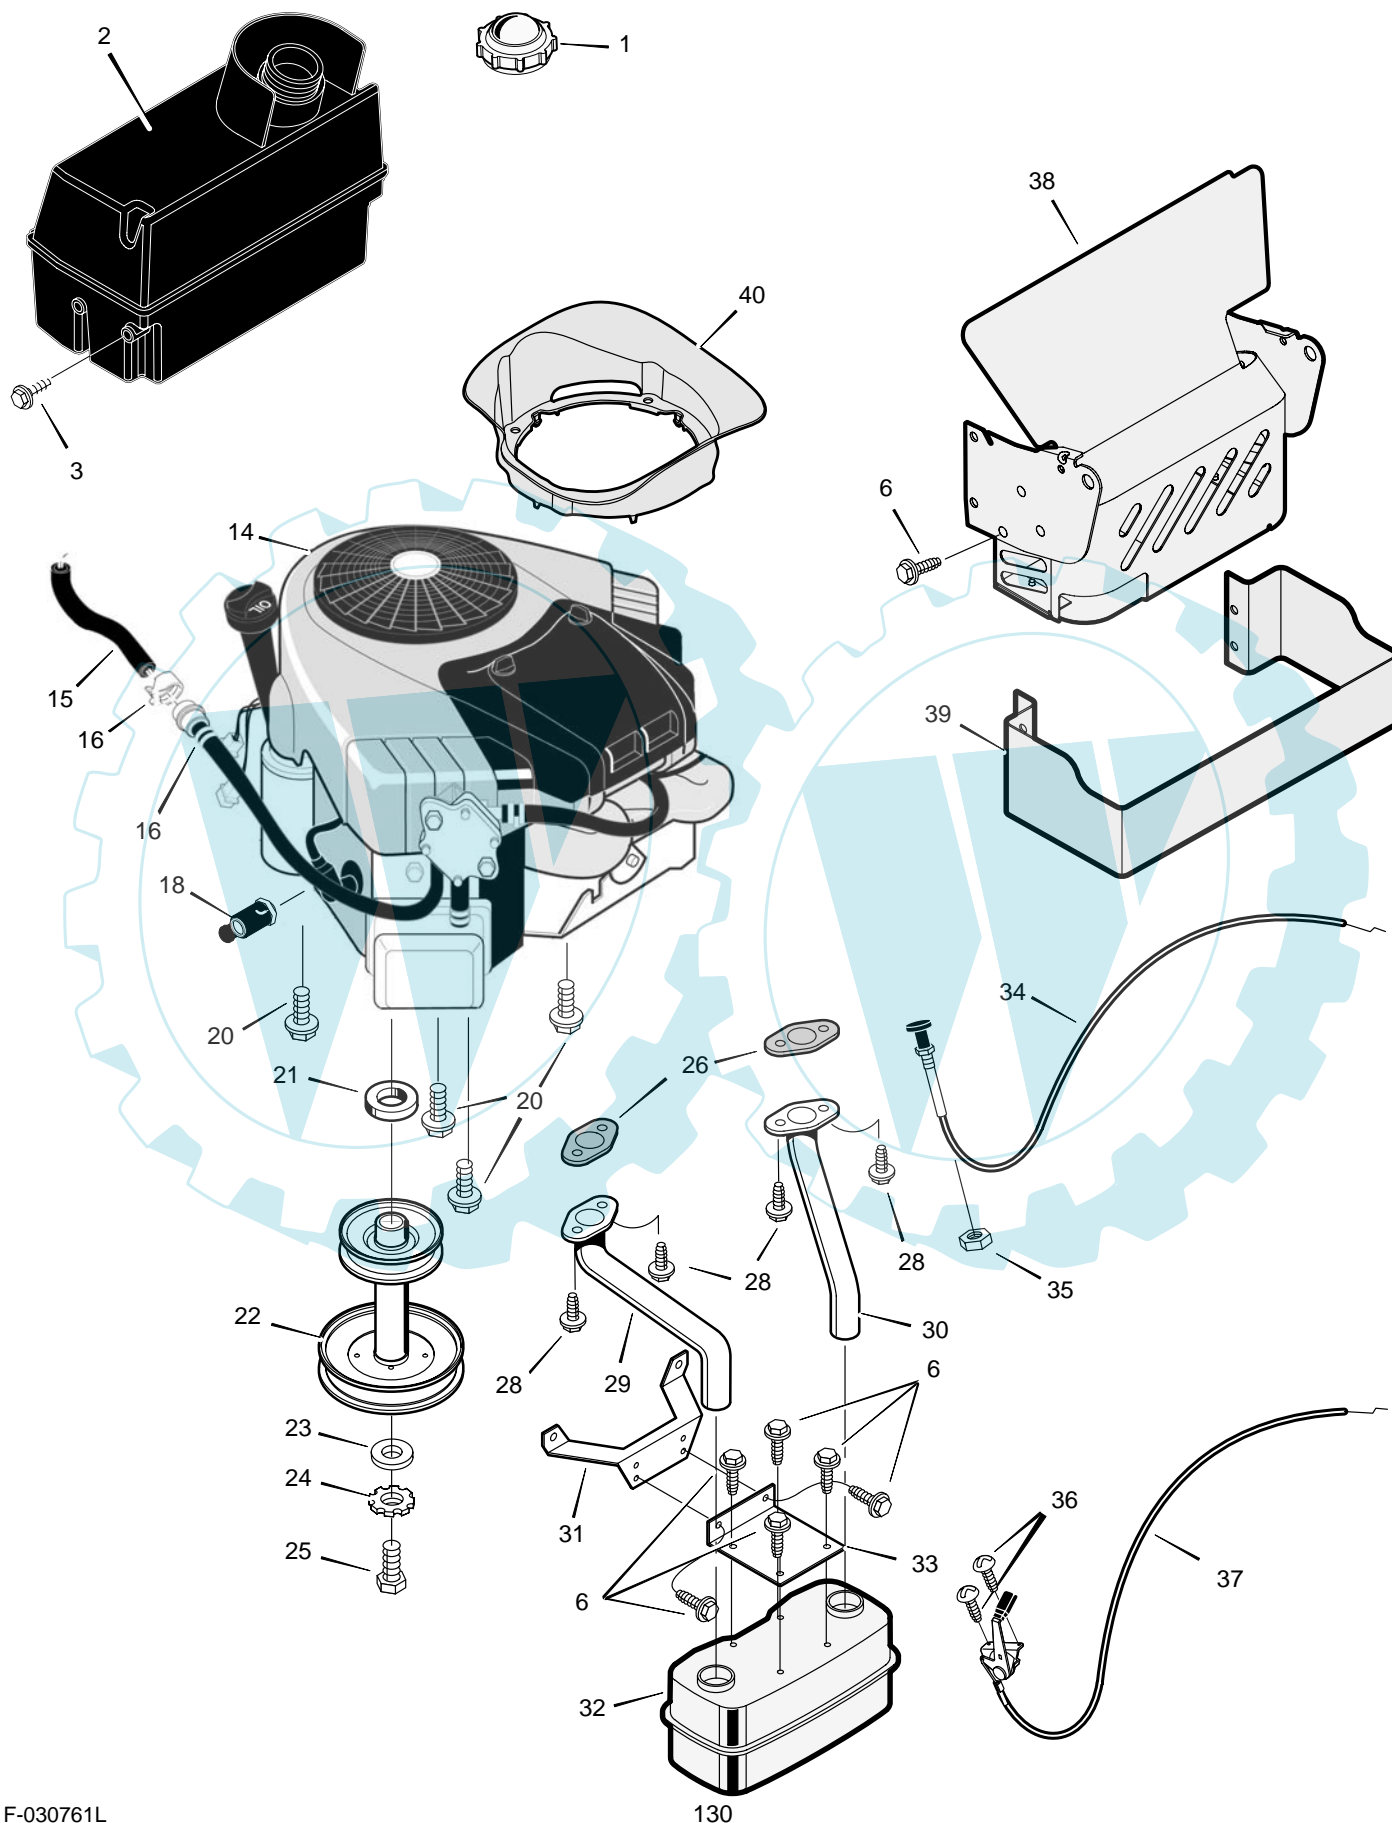

# MODEL 465604x50A

# REPAIR PARTS ENGINE MOUNT ASSEMBLY


Key No.	Part No.	Description	Key No.	Part No.	Description
1	092317	Cap, Fuel **	26	711851	Gasket
2	690289	Tank, Fuel	27	018x15	Washer
3	26x253	Screw	28	06x103	Bolt
6	26x263	Screw	29	690541	Tube, Right Exhaust
14	*	Engine *	30	690542	Tube, Left Exhaust
15	7601033	Line, Fuel (18 inches long) **	31	690537E700	Bracket, Muffler Mounting
16	095197	Clamp **	32	093259	Muffler
18	325547	Drain, Oil	33	690538E700	Bracket, Muffler
- -	327422	Drain, Cap	34	690401	Choke
20	0025x7	Bolt	35	015x68	Nut
21	093077	Spacer	36	26x201	Screw
22	690507	Pulley, Stack	37	093165	Control, Throttle
23	17x170	Washer	38	1001456-717	Shield Assembly, Heat
24	019x35	Lockwasher	39	1001620-717	Guard, Heat Shield
25	01x140	Bolt	40	1001588	Plenum

\* Parts are available from an Engine Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.

\*\* These parts are included with Key number 2.


MODEL 465604x50A

REPAIR PARTS  
ELECTRICAL SYSTEM

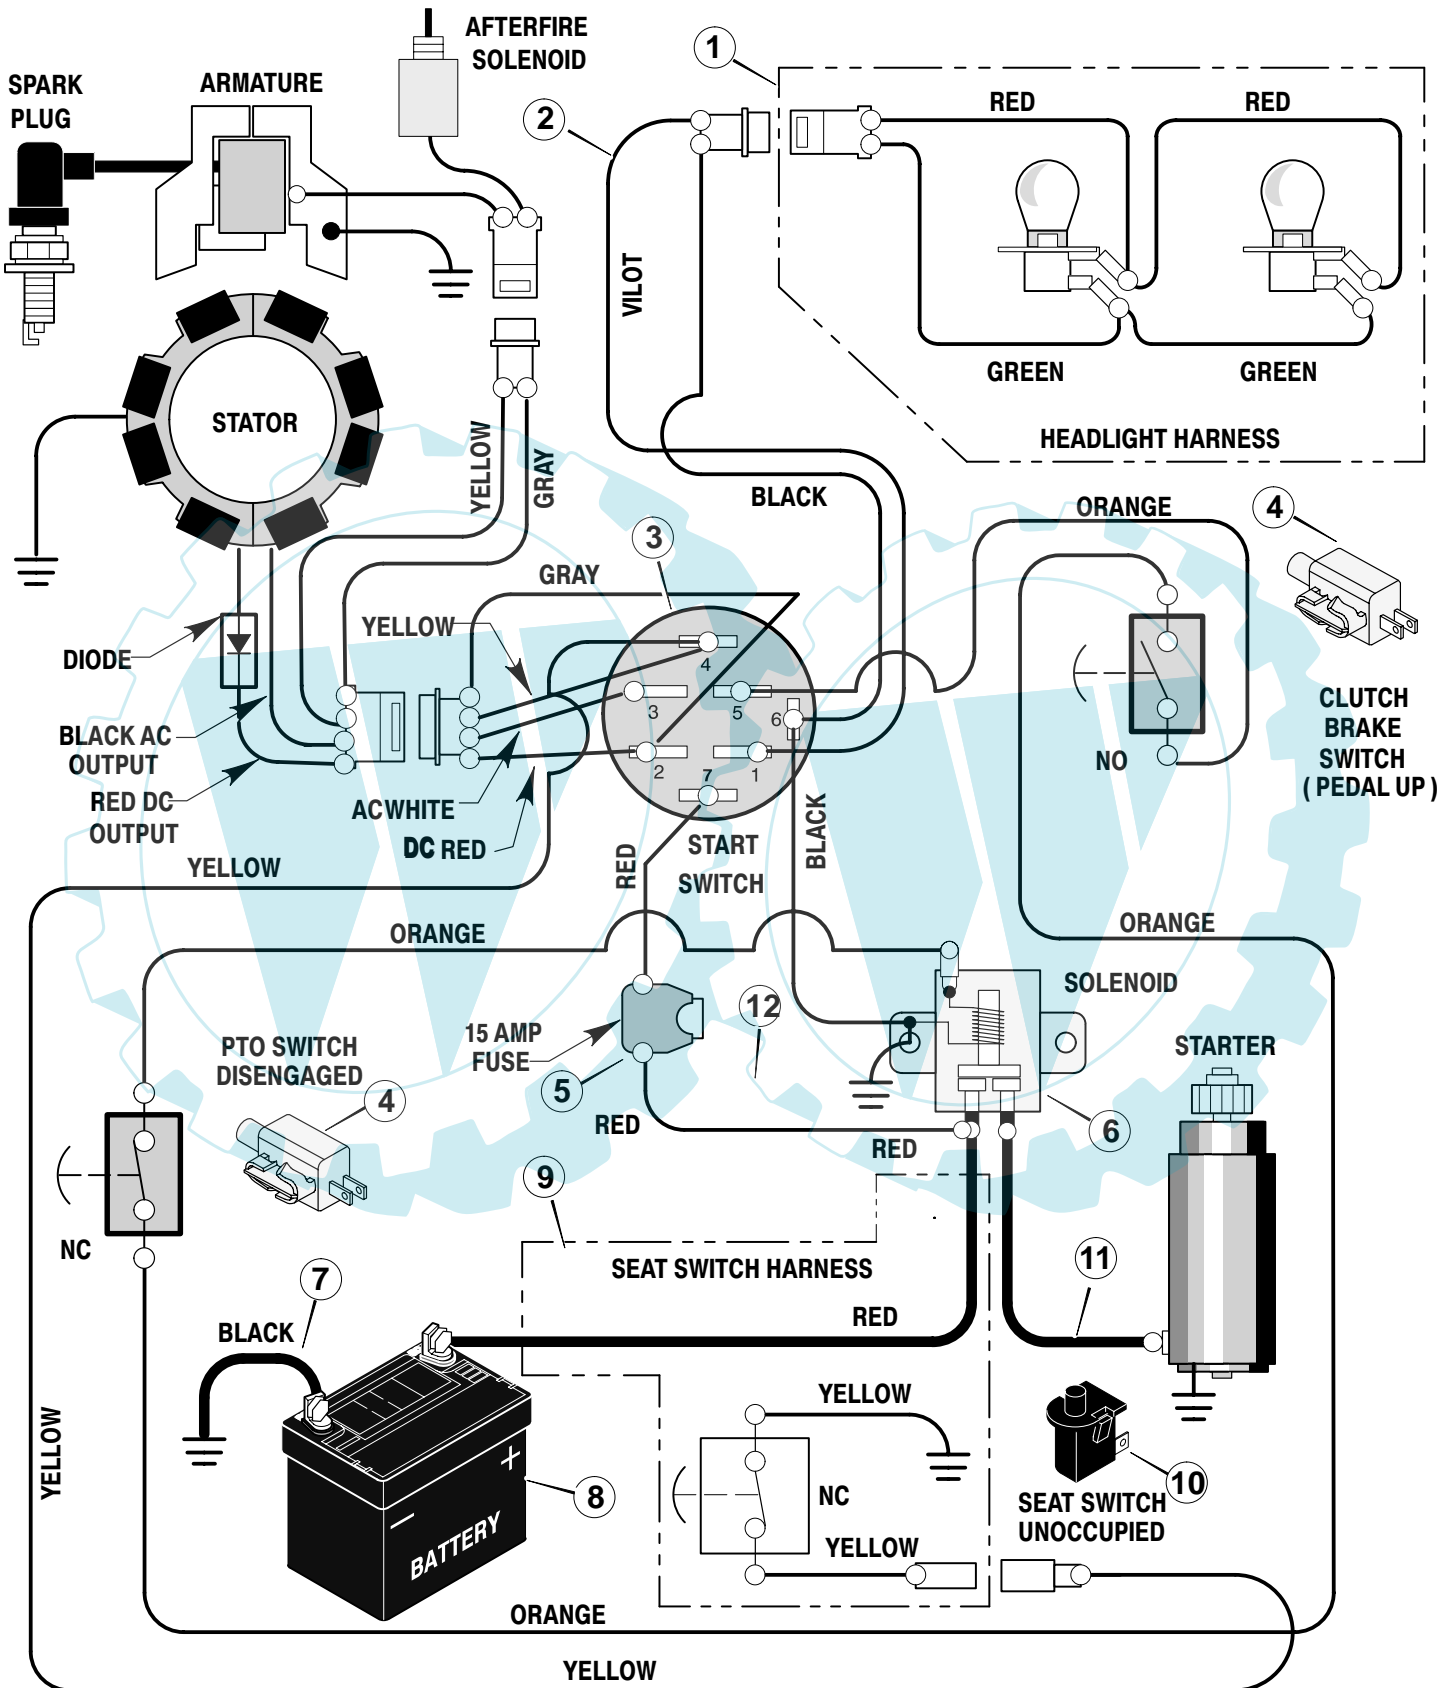

# MODEL 465604x50A

# REPAIR PARTS ELECTRICAL SYSTEM

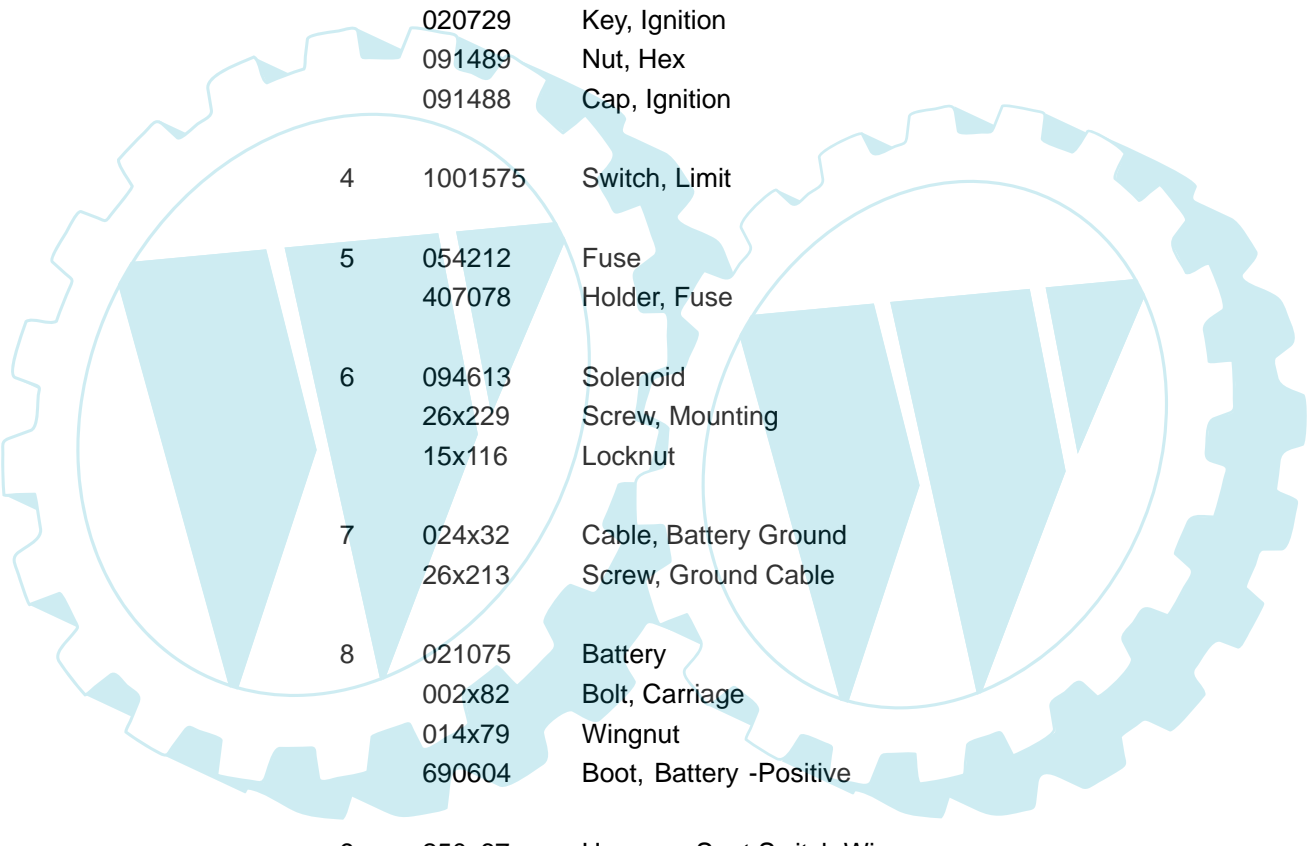

Key No.	Part No.	Description
1	250x92	Harness, Light Wire
	092372	Socket, Light
	090084	Bulb, Light
2	250x112	Harness, Chassis Wire
3	092556	Switch, Ignition
	020729	Key, Ignition
	091489	Nut, Hex
	091488	Cap, Ignition
4	1001575	Switch, Limit
5	054212	Fuse
	407078	Holder, Fuse
6	094613	Solenoid
	26x229	Screw, Mounting
	15x116	Locknut
7	024x32	Cable, Battery Ground
	26x213	Screw, Ground Cable
8	021075	Battery
	002x82	Bolt, Carriage
	014x79	Wingnut
	690604	Boot, Battery -Positive
9	250x67	Harness, Seat Switch Wire
10	094159	Switch, Seat Sensor
11	024x31	Cable