


MODEL 38516x53D

REPAIR PARTS CHASSIS & HOOD

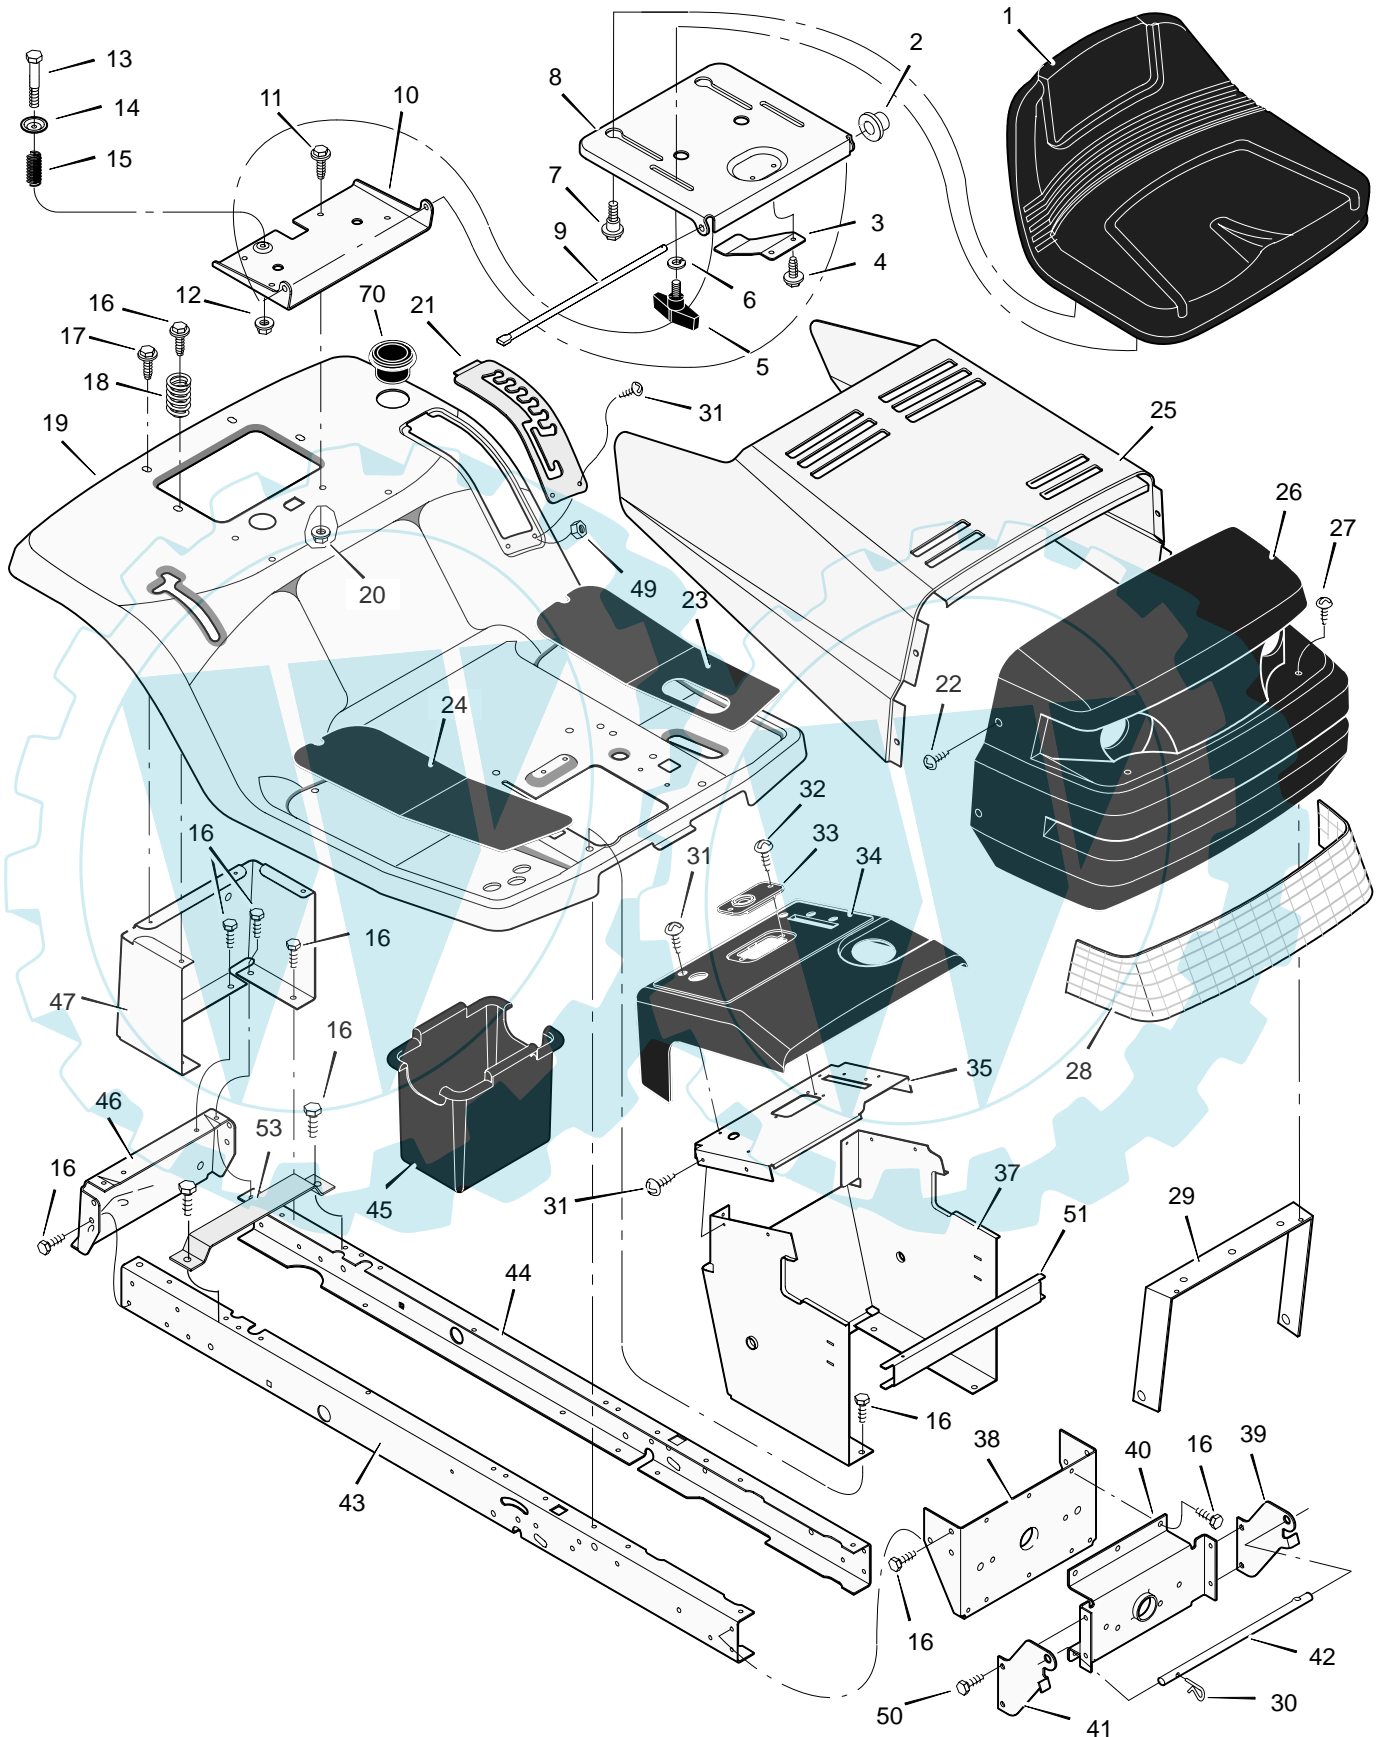


MODEL 38516x53D

REPAIR PARTS CHASSIS & HOOD

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Seat	690566	28	Lens	092369
2	Cap, Push On	028x23	29	Brace, Grille	092448
3	Spring	094057	30	Pin, Hair	0031x4
4	Screw	26x229	31	Screw	26x270
5	Bolt, Wing	1001054	32	Screw	26x238
6	Washer	017x47	33	Bearing, Steering	094214
7	Bolt, Shoulder	009x56	34	Dash	776061
8	Support, Seat	094154E701	35	Plate, Dash	094211
9	Rod, Pivot	094156 Z	36	Panel, Access	093007E701
10	Bracket, Pivot	1001648E701	37	Support, Dash	095323E510
11	Bolt	001x45	38	Bracket, Rear Hanger	1001270E701
12	Nut	015x89	39	Support, Left Grille	690544E700
13	Bolt, Shoulder	009x55	40	Axle, Hanger	094007E701
14	Washer	094155 Z	41	Support, Right Grille	690543E700
15	Spring	164x31	42	Rod, Pivot	092332 Z
16	Screw	26x249	43	Frame, Right	1001928E701
17	Screw	26x263	44	Frame, Left	1001927E701
18	Spring	164x30	45	Container, Battery	690424
19	Deck, Seat	1001558E510	46	Plate, Hitch	1001002E701
20	Nut	015x123	47	Panel, Rear	690434E701
21	Plate, Index	094829E701	49	Nut	015x81
22	Bolt, Shoulder	009x47	50	Screw	26x277
23	Mat, Left	094999	51	Channel	094215E700
24	Mat, Right	094998	53	Support, Battery	690482E701
25	Hood	092333E510	70	Holder, Beverage	1001542
26	Grille Assembly (Includes Lens)	094867E701	—	Instruction Book & Parts List	F-030708L
27	Screw	26x239			

MODEL 38516x53D

REPAIR PARTS MOTION DRIVE

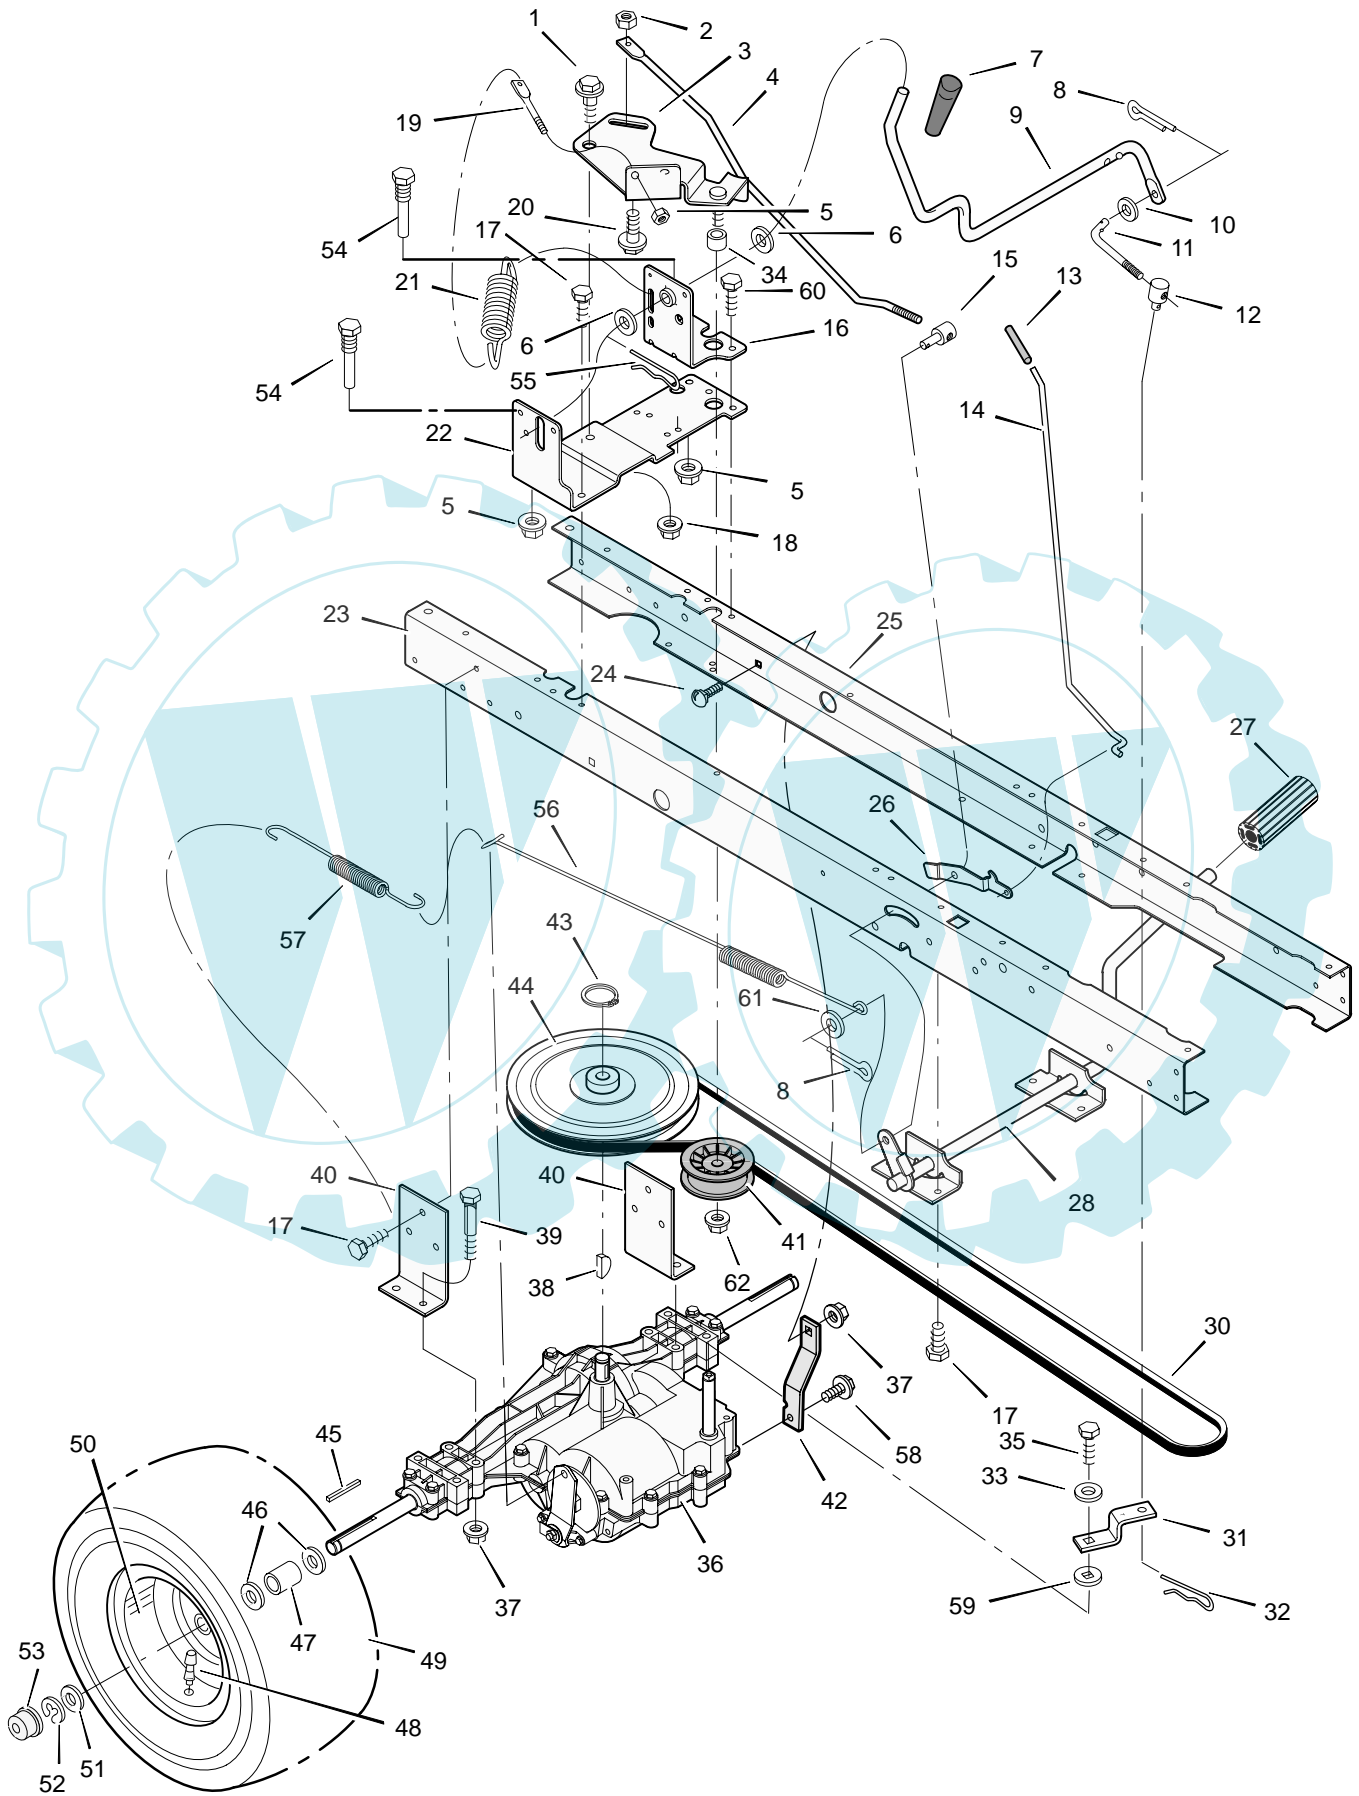

MODEL 38516x53D

REPAIR PARTS MOTION DRIVE


Key No.	Description	Part No.	Key No.	Description	Part No.
1	Bolt, Shoulder	009x39	33	Washer	017x38
2	Nut, Hex	015x89	34	Spacer	690369
3	Arm, Idler	690173 Z	35	Bolt	06x105
4	Rod, Clutch	094041 Z	36	Transaxle, Peerless	— ** —
5	Nut	015x79	37	Nut	015x88
6	Washer	17x102	38	Key, Woodruff	020697
7	Grip	092697	39	Bolt	01x155
8	Pin, Cotter	030x20	40	Bracket, Transaxle	094008E701
9	Lever, Shift	094043 Z	41	Pulley	690409
10	Washer	017x47	42	Bracket, Transaxle Support	094433E700
11	Link, Shift	094044 Z	43	Ring Retainer	0011x7
12	Nut, Adjuster	021920 Z	44	Pulley, Drive	095094
13	Grip	091079	45	Key, Square	021553
14	Rod, Parking Brake	1001271 Z	46	Washer	17x160
15	Nut, Adjuster	094815 Z	47	Spacer, Transaxle	690554 Z
16	Bracket, Shift Pivot	1001303 Z	48	Stem, Valve	024373
17	Screw	26x249	49	Tire *	091923
18	Nut	015x84	—	Tube	407049
19	Mount, Stud Spring	094042 Z	50	Wheel & Tire Assembly	092288-601
20	Bolt, Shoulder	009x54	51	Washer	17x195
21	Spring, Extension	165x116	52	E-Ring	0011x3
22	Bracket, Right Shifter	1001302E701	53	Hub Cap	094618
23	Frame, Right	1001928E701	54	Guide, Belt	093349
24	Bolt, Carriage	002x53	55	Pin, Hair	0031x4
25	Frame, Left	1001927E701	56	Spring, Extension	165x115
26	Latch, Parking Brake	094045 Z	57	Spring, Extension	165x92
27	Pedal	021544	58	Screw	26x216
28	Lever, Brake/Clutch	094038E700	59	Washer	17x148
30	Belt, Motion Drive	037x87	60	Screw	26x267
31	Yoke, Shift	094031 Z	61	Washer	17x169
32	Pin, Hair	0031x6	62	Nut	015x98

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

** For information on Replacement Parts for this transaxle contact the manufacturer.

MODEL 38516x53D

REPAIR PARTS
STEERING

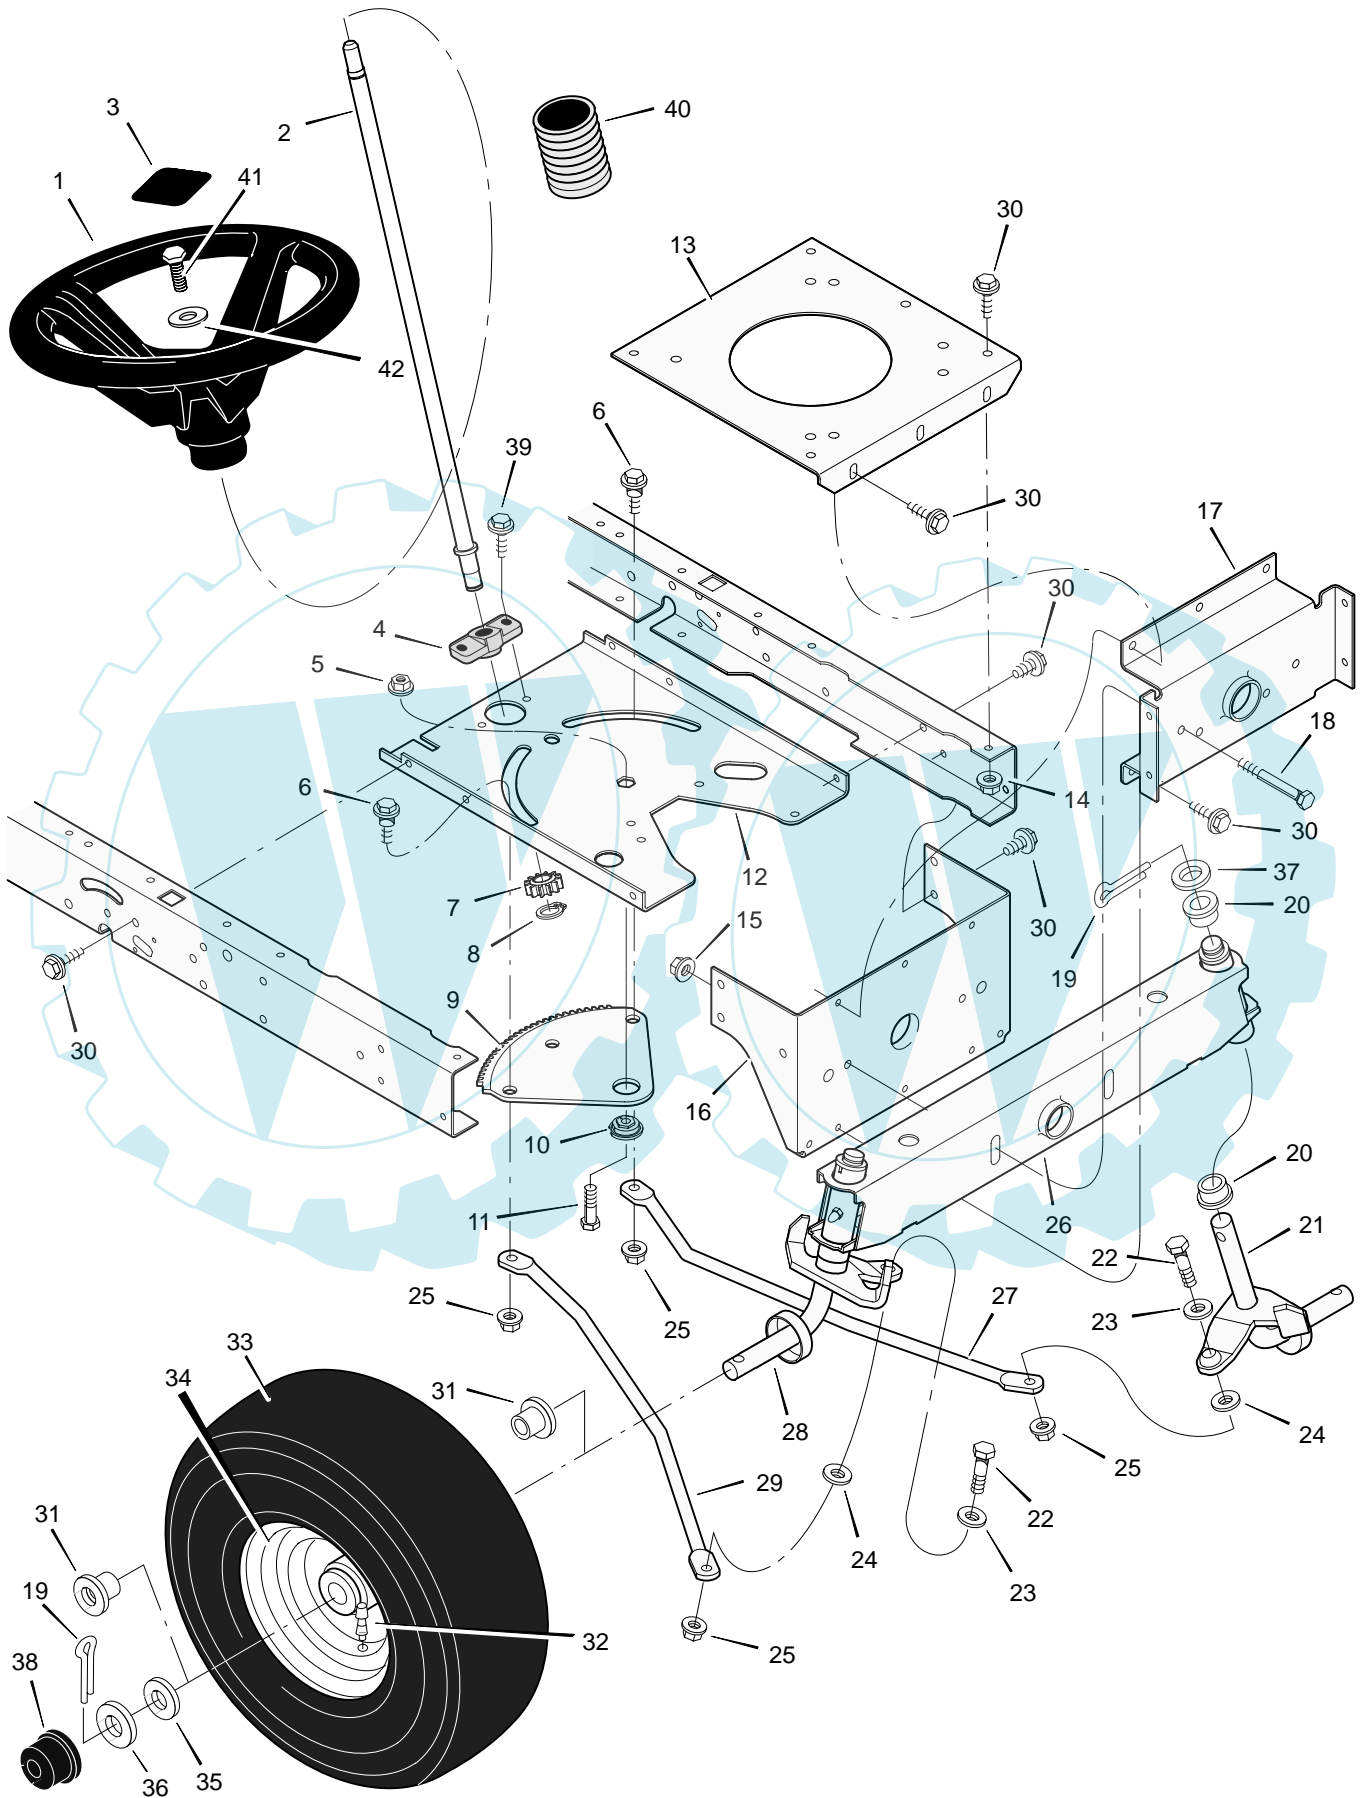

MODEL 38516x53D


REPAIR PARTS STEERING

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Wheel, Steering	095185	23	Washer	17x104
2	Post, Steering	690626	24	Washer	017x53 Z
3	Insert, Steering Wheel	711326	25	Nut, Flange	015x84
4	Bearing	094124	26	Axle Assembly	7601037
5	Nut, Flange	15x111	27	Drag Link, Left	095329E701
6	Bolt, Shoulder	009x57	28	Spindle Assembly, Right	094575E701
7	Gear, Pinion	690183	29	Drag Link, Right	095328E701
8	Ring, Snap	011x25	30	Screw	26x249
9	Gear, Sector	094121	31	Bearing, Wheel	091334
10	Bearing	094123	32	Stem, Valve	024373
11	Bolt	001x84	33	Tire *	091923
12	Plate, Steering	1001121E701	—	Tube	407924
13	Plate, Engine	094006E700	34	Wheel and Tire Assembly	094579-601
14	Nut, Flange	015x88	35	Washer	17x195
15	Nut, Flange	15x118	36	Washer	17x192
16	Bracket, Hanger	1001270E701	37	Washer	17x113
17	Axle, Hanger	094007E701	38	Hub Cap	094618
18	Bolt	01x146	39	Screw	26x267
19	Pin, Cotter	030x49	40	Bellows	054789
20	Bearing	690150	41	Bolt	0025x3
21	Spindle Assembly, Left	094576E701	42	Washer	17x146
22	Bolt	01x111			

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

MODEL 38516x53D

REPAIR PARTS MOWER HOUSING SUSPENSION

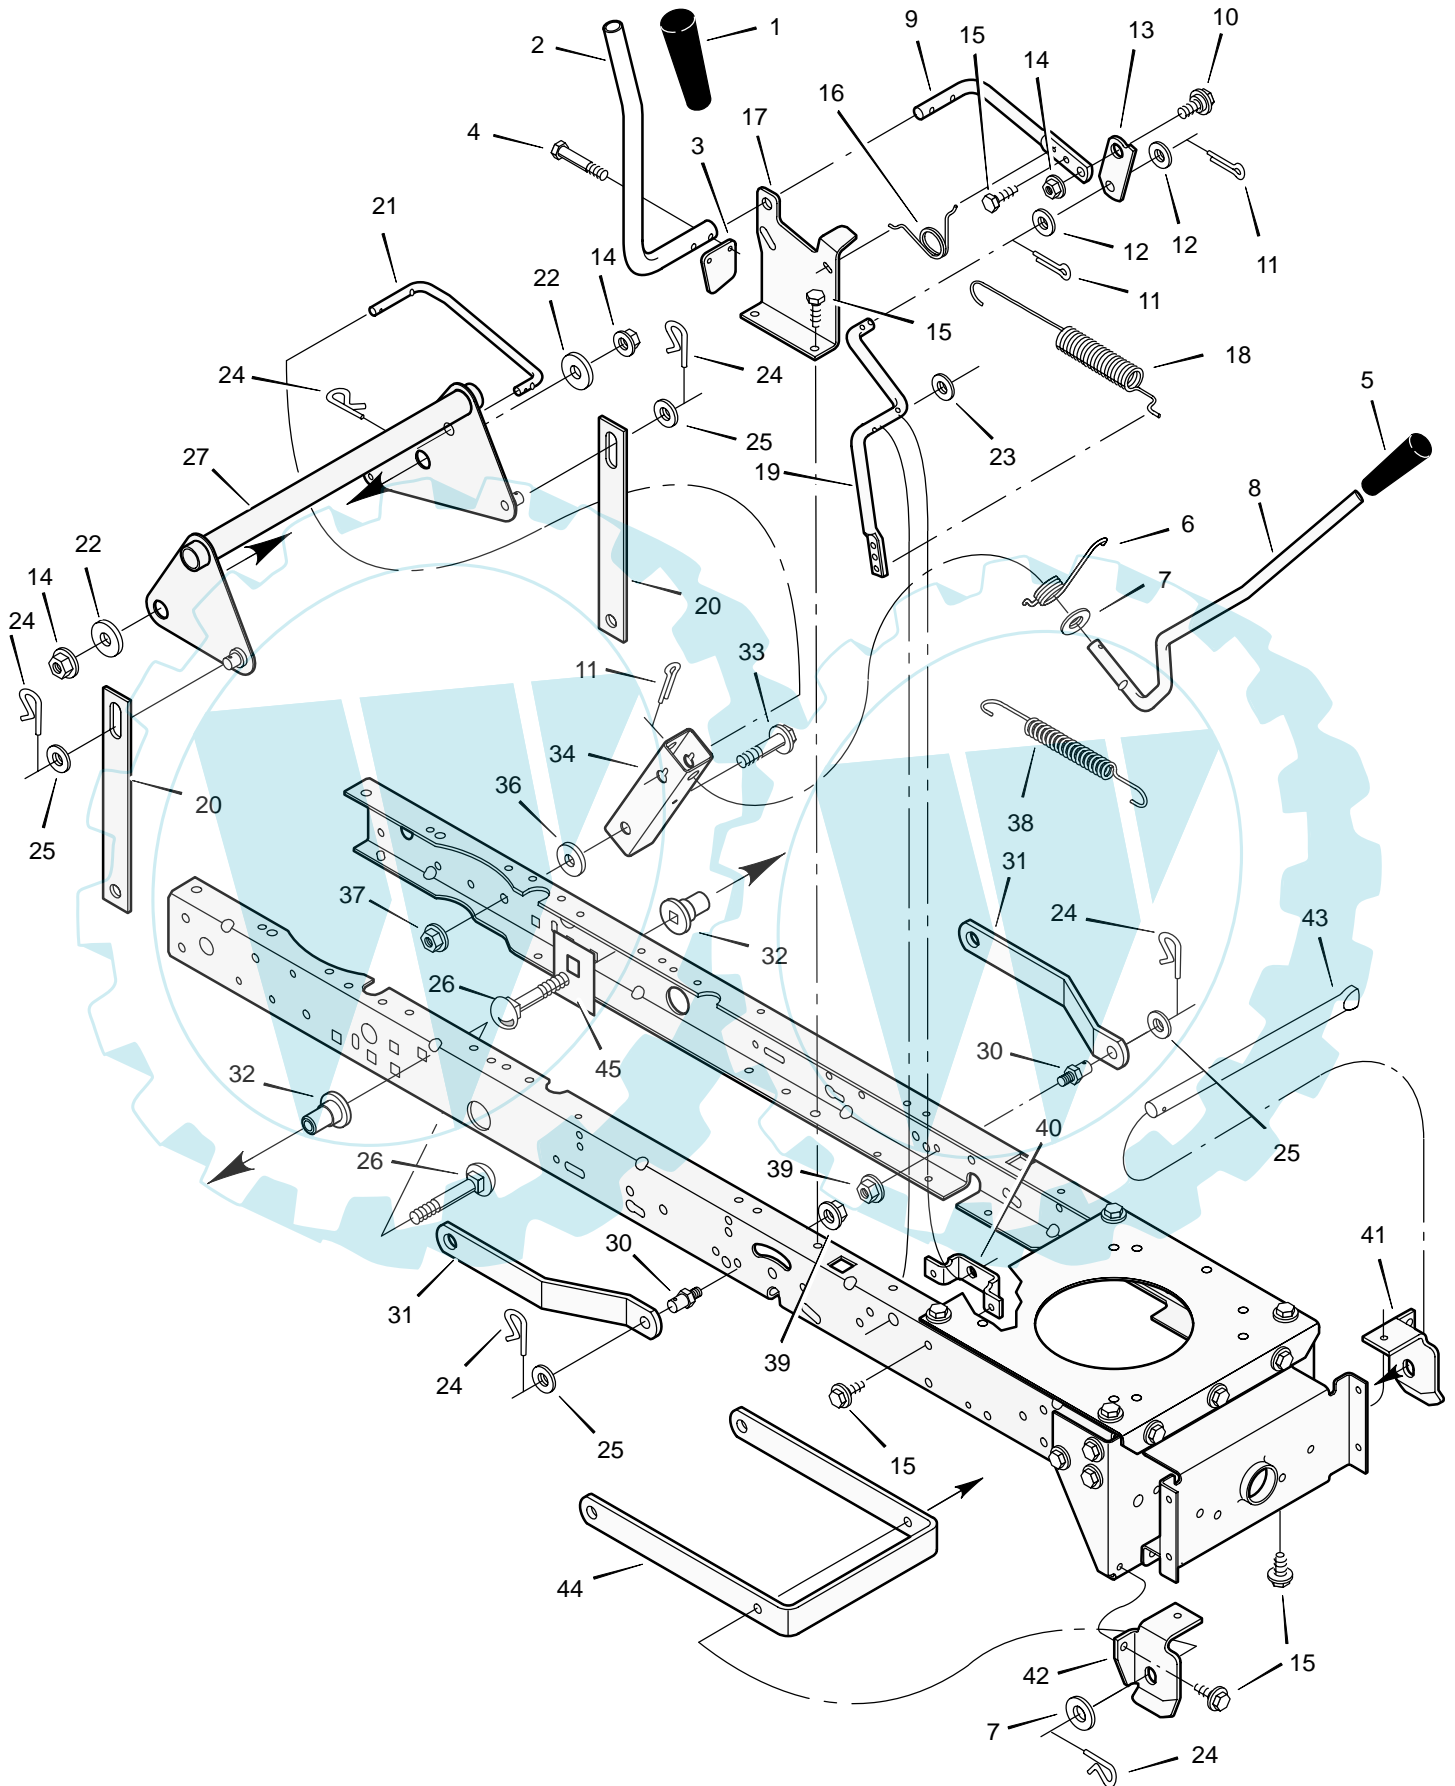


MODEL 38516x53D

REPAIR PARTS MOWER HOUSING SUSPENSION

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Grip	092698	22	Washer	17x168
2	Handle, PTO	094346 Z	23	Washer	017x57
3	Pad, Switch	094022 Z	24	Pin, Hair	0031x4
4	Bolt	0025x3	25	Washer	017x91
5	Grip	092697	26	Bolt, Carriage	002x85
6	Spring	166x40	27	Lever Assembly, Lift	1001111E700
7	Washer	17x103	30	Pin	094067
8	Handle, Lift	690533	31	Bracket, Rear Suspension	094055E701
9	Lever, PTO	094017 Z	32	Spacer, Lifter	690151
10	Bolt, Shoulder	009x39	33	Bolt, Shoulder	009x53
11	Pin, Cotter	030x20	34	Bracket, Pivot	094015E700
12	Washer	017x57	36	Washer	17x191
13	Link, PTO	094004 Z	37	Nut, Flange	015x84
14	Nut, Flange	015x84	38	Spring	165x131
15	Screw	26x249	39	Nut, Flange	015x68
16	Spring	166x39	40	Bracket, PTO	094005E700
17	Bracket, PTO	094018E701	41	Hanger, Left Deck	094027E700
18	Spring	165x118	42	Hanger, Right Deck	094026E700
19	Crank, PTO	690394E701	43	Rod, Hanger	094158 Z
20	Link, Lift	690212E701	44	Bracket, Suspension	690539E701
21	Link, Lift Handle	690122E701	45	Plate, Stiffening	1001098E701

MODEL 38516x53D

REPAIR PARTS MOWER HOUSING

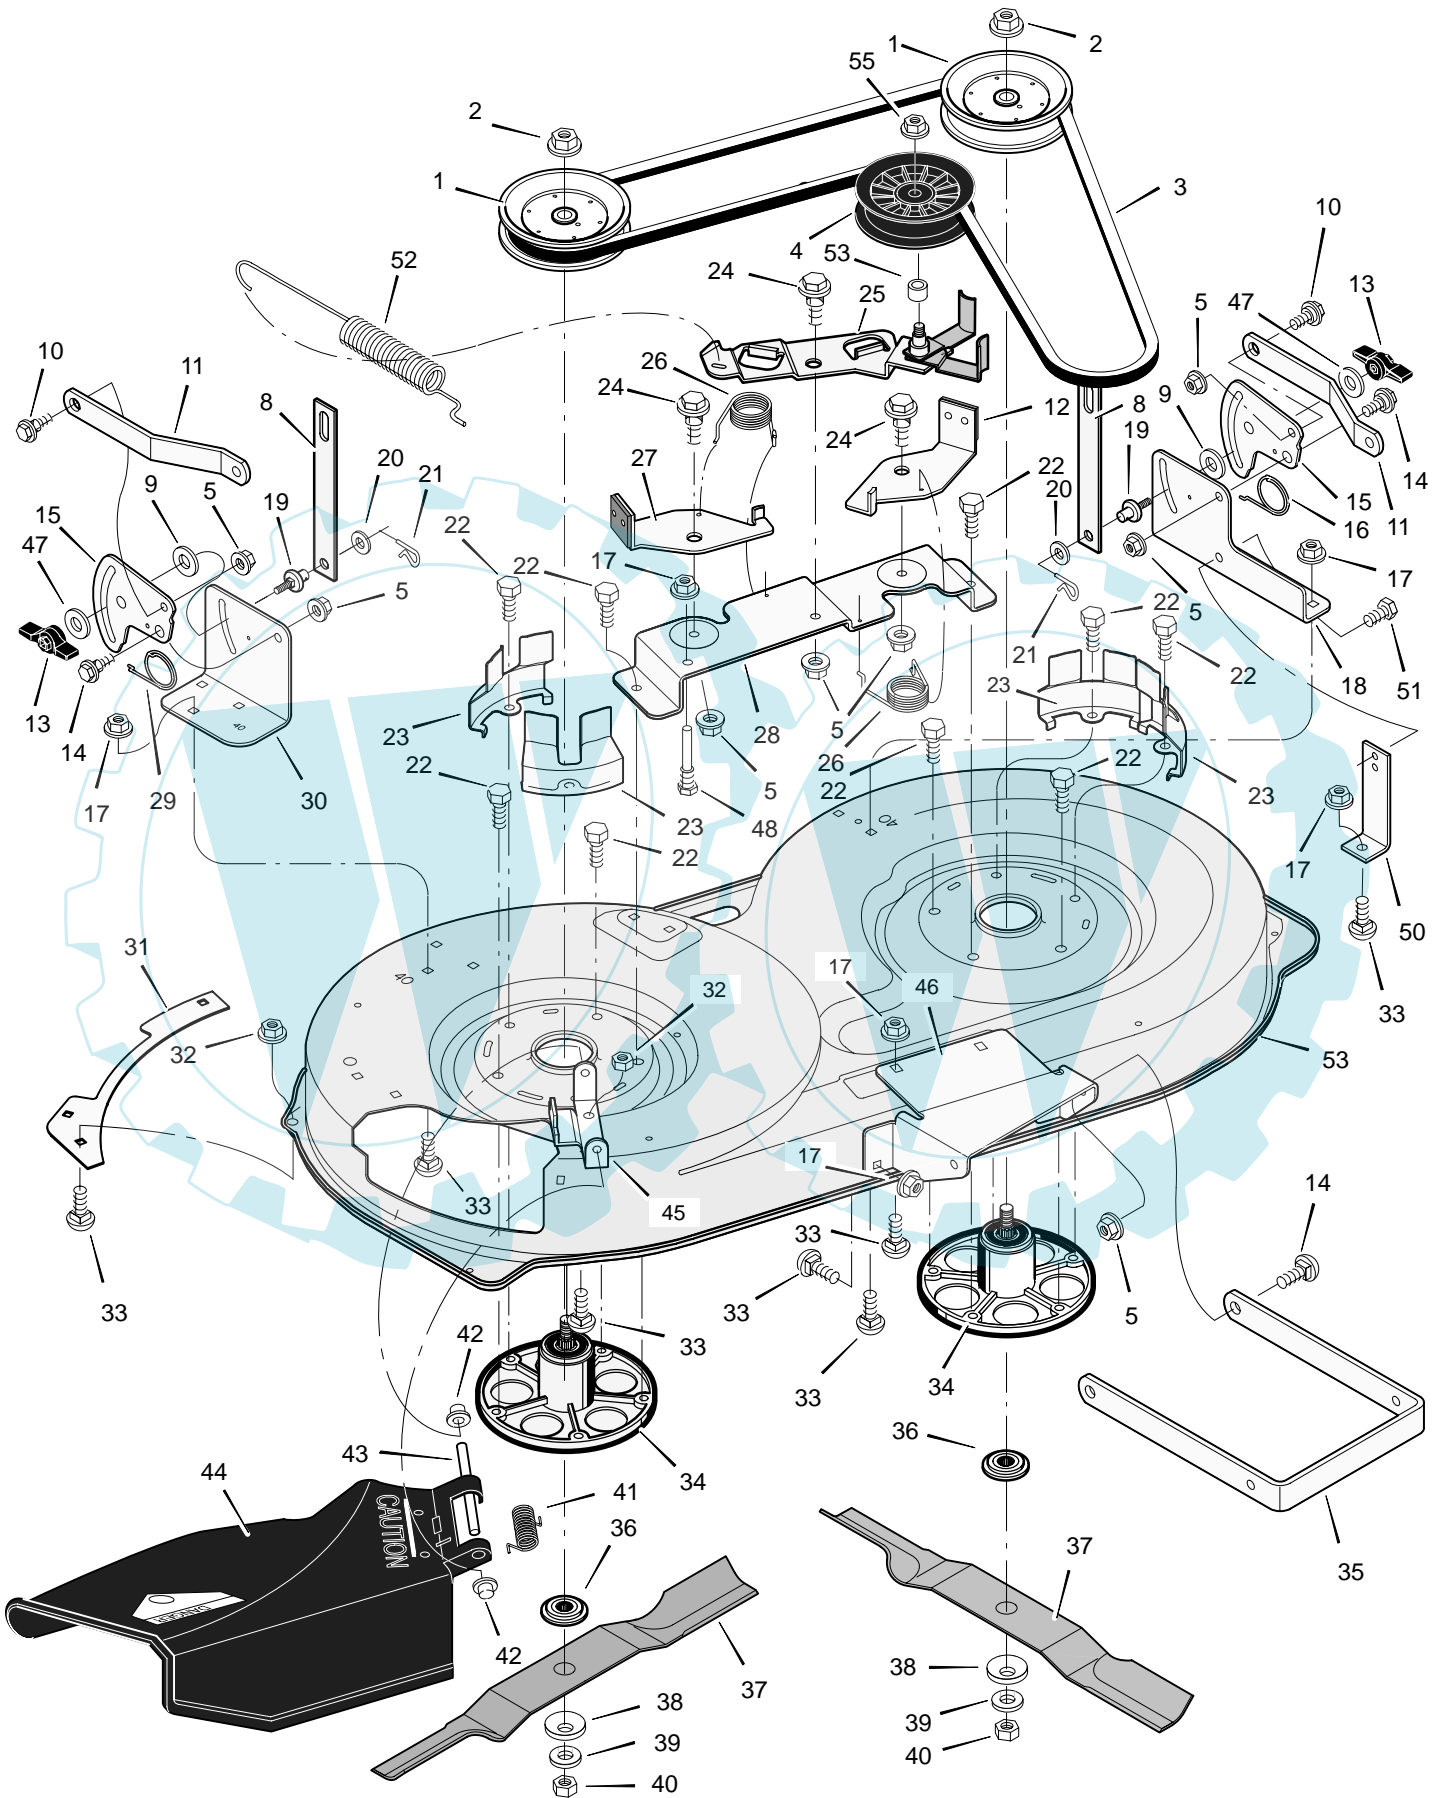

MODEL 38516x53D


REPAIR PARTS MOWER HOUSING

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Pulley, Jackshaft	092852	30	Bracket, Right Suspension	094052E701
2	Nut, Hex	15x140	31	Plate	091770E700
3	Belt, Mower Drive	037x86	32	Nut, Flange	015x88
4	Pulley, Idler	690387	33	Bolt, Carriage	002x53
5	Nut, Flange	015x84	34	Mandrell	1001200
8	Link, Lift	690212E701	35	Bracket, Suspension	690539E701
9	Pad, Friction	094137	36	Adapter, Blade	690411
10	Bolt, Shoulder	009x52	37	Blade	095104E701
11	Bracket, Suspension	094055E701	38	Washer	17x166
12	Pad Assembly, Left Brake	094049E701	39	Washer	17x165
13	Knob	094068	40	Nut	15x100
14	Bolt, Shoulder	009x51	41	Spring	0166x4
15	Plate, Suspension	094128E700	42	Cap, Push On	028x23
16	Spring	166x43	43	Rod, Pivot	094957 Z
17	Nut, Flange	015x79	44	Deflector Assembly	094707
18	Bracket, Left Suspension	094054E700	45	Bracket, Deflector	094956E701
19	Pin, Hanger	095194	46	Bracket, Front Hanger	094062E700
20	Washer	017x91	47	Washer	017x45 Z
21	Pin, Cotter	0031x4	48	Guide, Belt	094781
22	Bolt	0025x7	50	Bracket, Support	094681E700
23	Cover, Pulley	094051E701	51	Screw	26x249
24	Bolt, Shoulder	009x39	52	Spring, Extension	165x118
25	Arm, Idler	1001499E700	53	Spacer	690369
26	Spring	166x41	54	Housing, Blade *	094061E700
27	Pad Assembly, Right Brake	094047E701	55	Nut, Flange	015x98
28	Bracket Assembly, Brake	094059E700	1-55	Complete Housing Assembly	776000
29	Spring	166x42			

* Includes Key No. 17, 18, 30, 31, 32, 33, 45, 46, 47 and 51.

MODEL 38516x53D

REPAIR PARTS ENGINE MOUNT

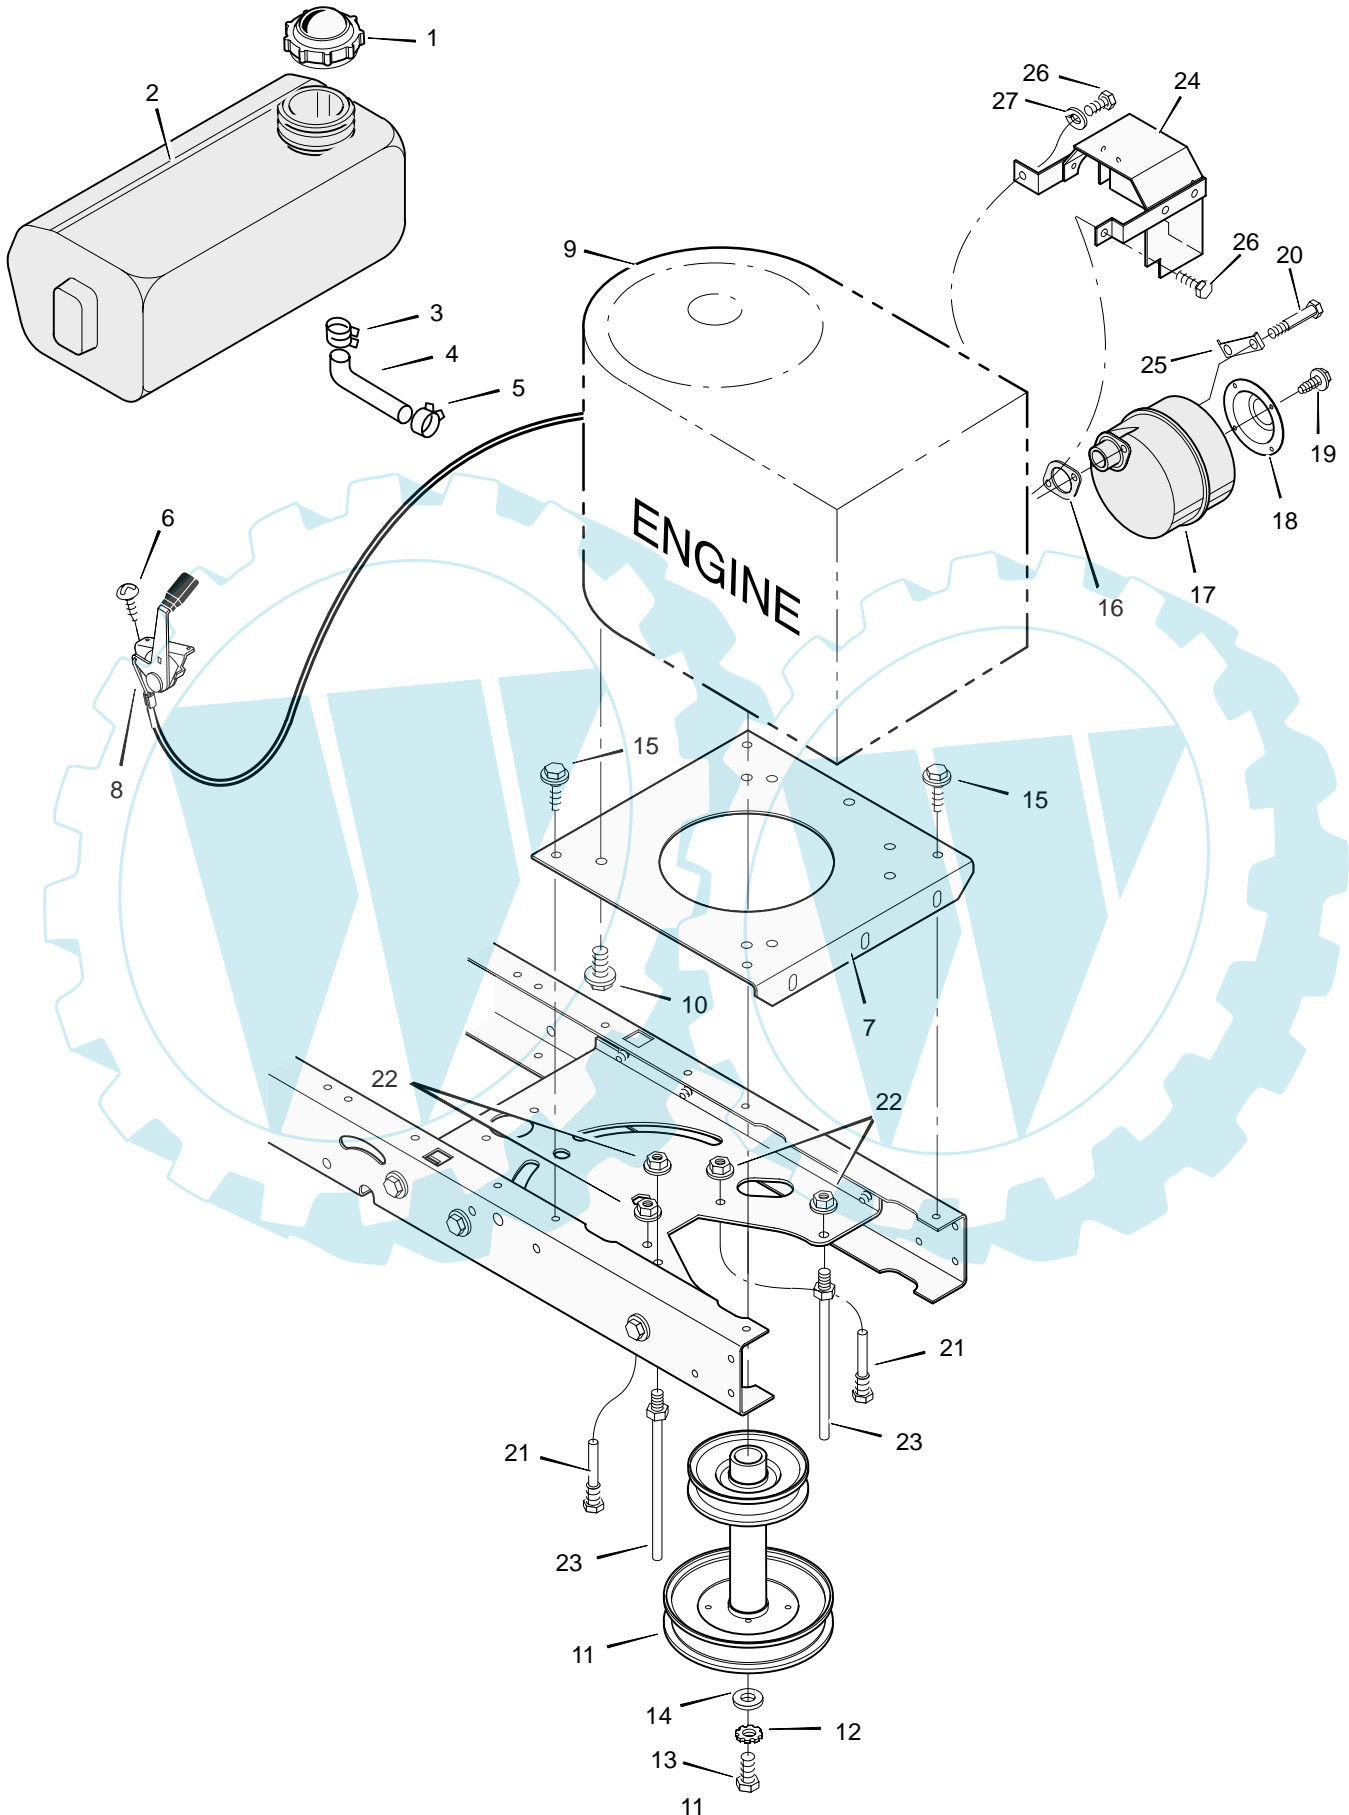

MODEL 38516x53D

REPAIR PARTS ENGINE MOUNT


Key No.	Description	Part No.
1	Fuel Cap	092317
2	Fuel Tank	690263
3	Hose Clamp **	095197
4	Fuel Line (must cut to length) **	7601033
5	Hose Clamp **	095197
6	Screw	26x201
7	Plate, Engine	094006E700
8	Throttle Control	092371
9	Engine, Briggs & Stratton	— * —
10	Bolt, Engine Mount	0025x7
11	Stack Pulley Assembly	690439 Z
12	Lockwasher	019x35
13	Bolt, Hex	01x140
14	Washer	17x140
15	Screw	26x249
16	Gasket	091309
17	Muffler	091271
18	Deflector, Muffler	094099 Z
19	Screw	26x208
20	Bolt, Hex	01x134
21	Guide, Belt	093349
22	Nut, Flange	015x79 Z
23	Guide, Belt	094066
24	Shield, Heat	690293
25	Lock, Screw	092378
26	Screw	26x263
27	Washer	018X32

** For information on Replacement Parts for this transaxle contact the manufacturer.


** Included with Key No. 2.

MODEL 38516x53D

REPAIR PARTS
ELECTRICAL SYSTEM

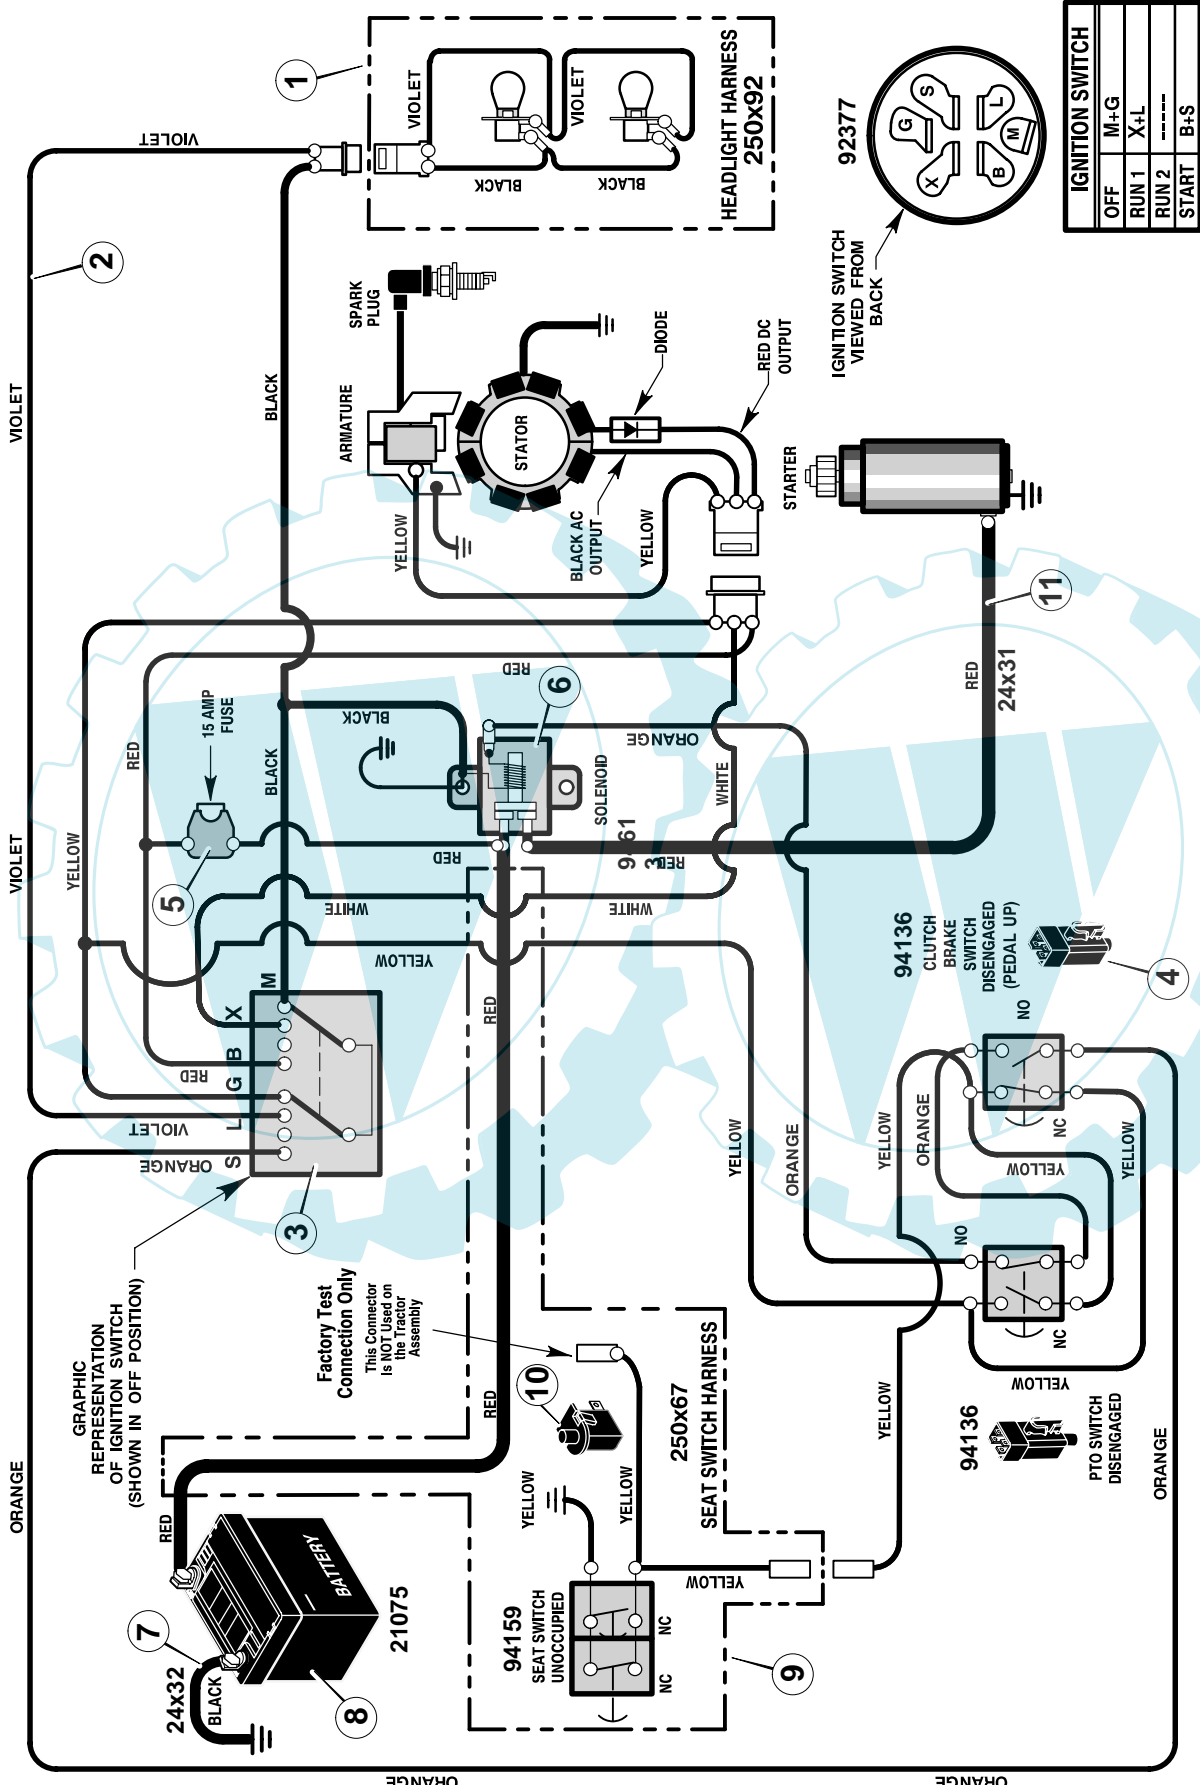


IGNITION SWITCH	
OFF	M+G
RUN 1	X+L
RUN 2	----
START	B+S

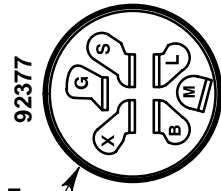

MAIN HARNESS: 250X116
SEAT: 250X67 LIGHT: 250X92

MODEL 38516x53D

REPAIR PARTS ELECTRICAL SYSTEM

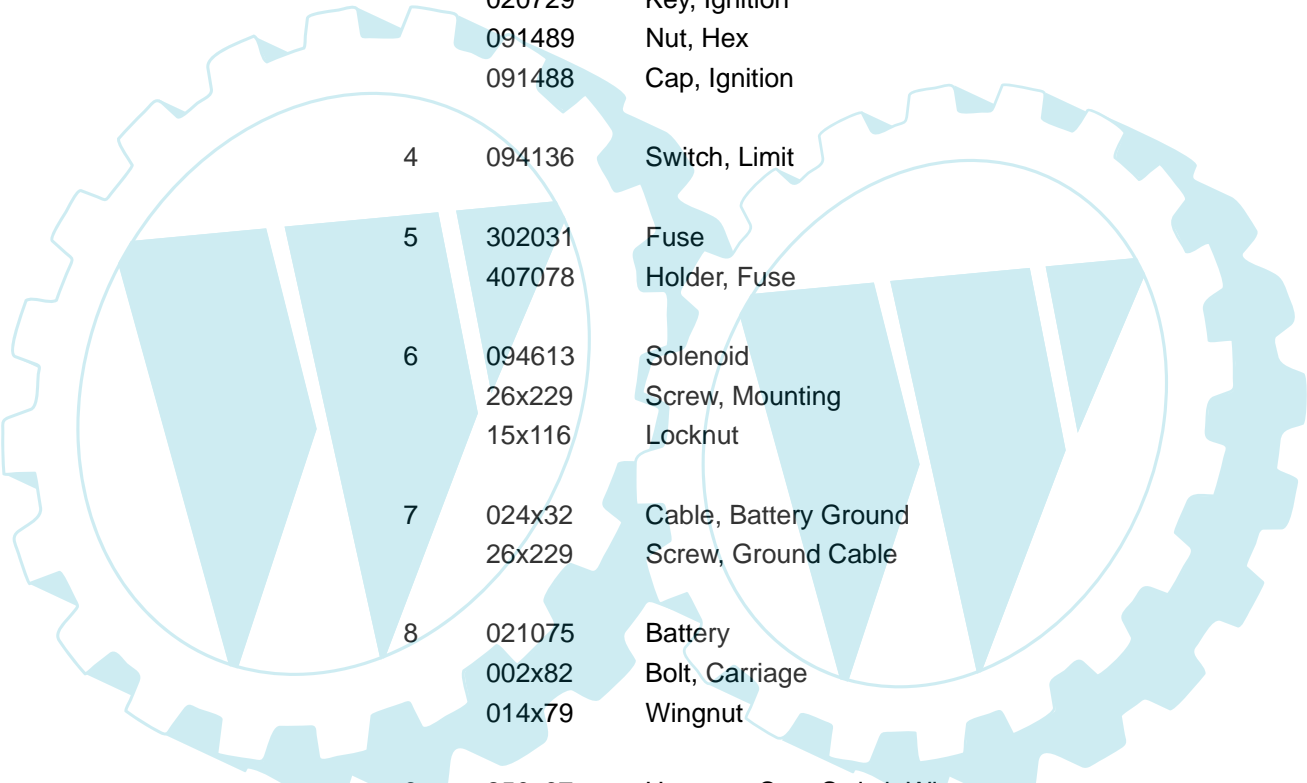

Key No.	Part No.	Description
1	250x92	Harness, Light Wire
	092372	Socket, Light
	090084	Bulb, Light
2	250x116	Harness, Chassis Wire
3	092377	Switch, Ignition
	020729	Key, Ignition
	091489	Nut, Hex
	091488	Cap, Ignition
4	094136	Switch, Limit
5	302031	Fuse
	407078	Holder, Fuse
6	094613	Solenoid
	26x229	Screw, Mounting
	15x116	Locknut
7	024x32	Cable, Battery Ground
	26x229	Screw, Ground Cable
8	021075	Battery
	002x82	Bolt, Carriage
	014x79	Wingnut
9	250x67	Harness, Seat Switch Wire
10	094159	Switch, Seat Sensor
11	024x31	Cable