


MODEL 40567x53C

REPAIR PART CHASSIS & HOOD

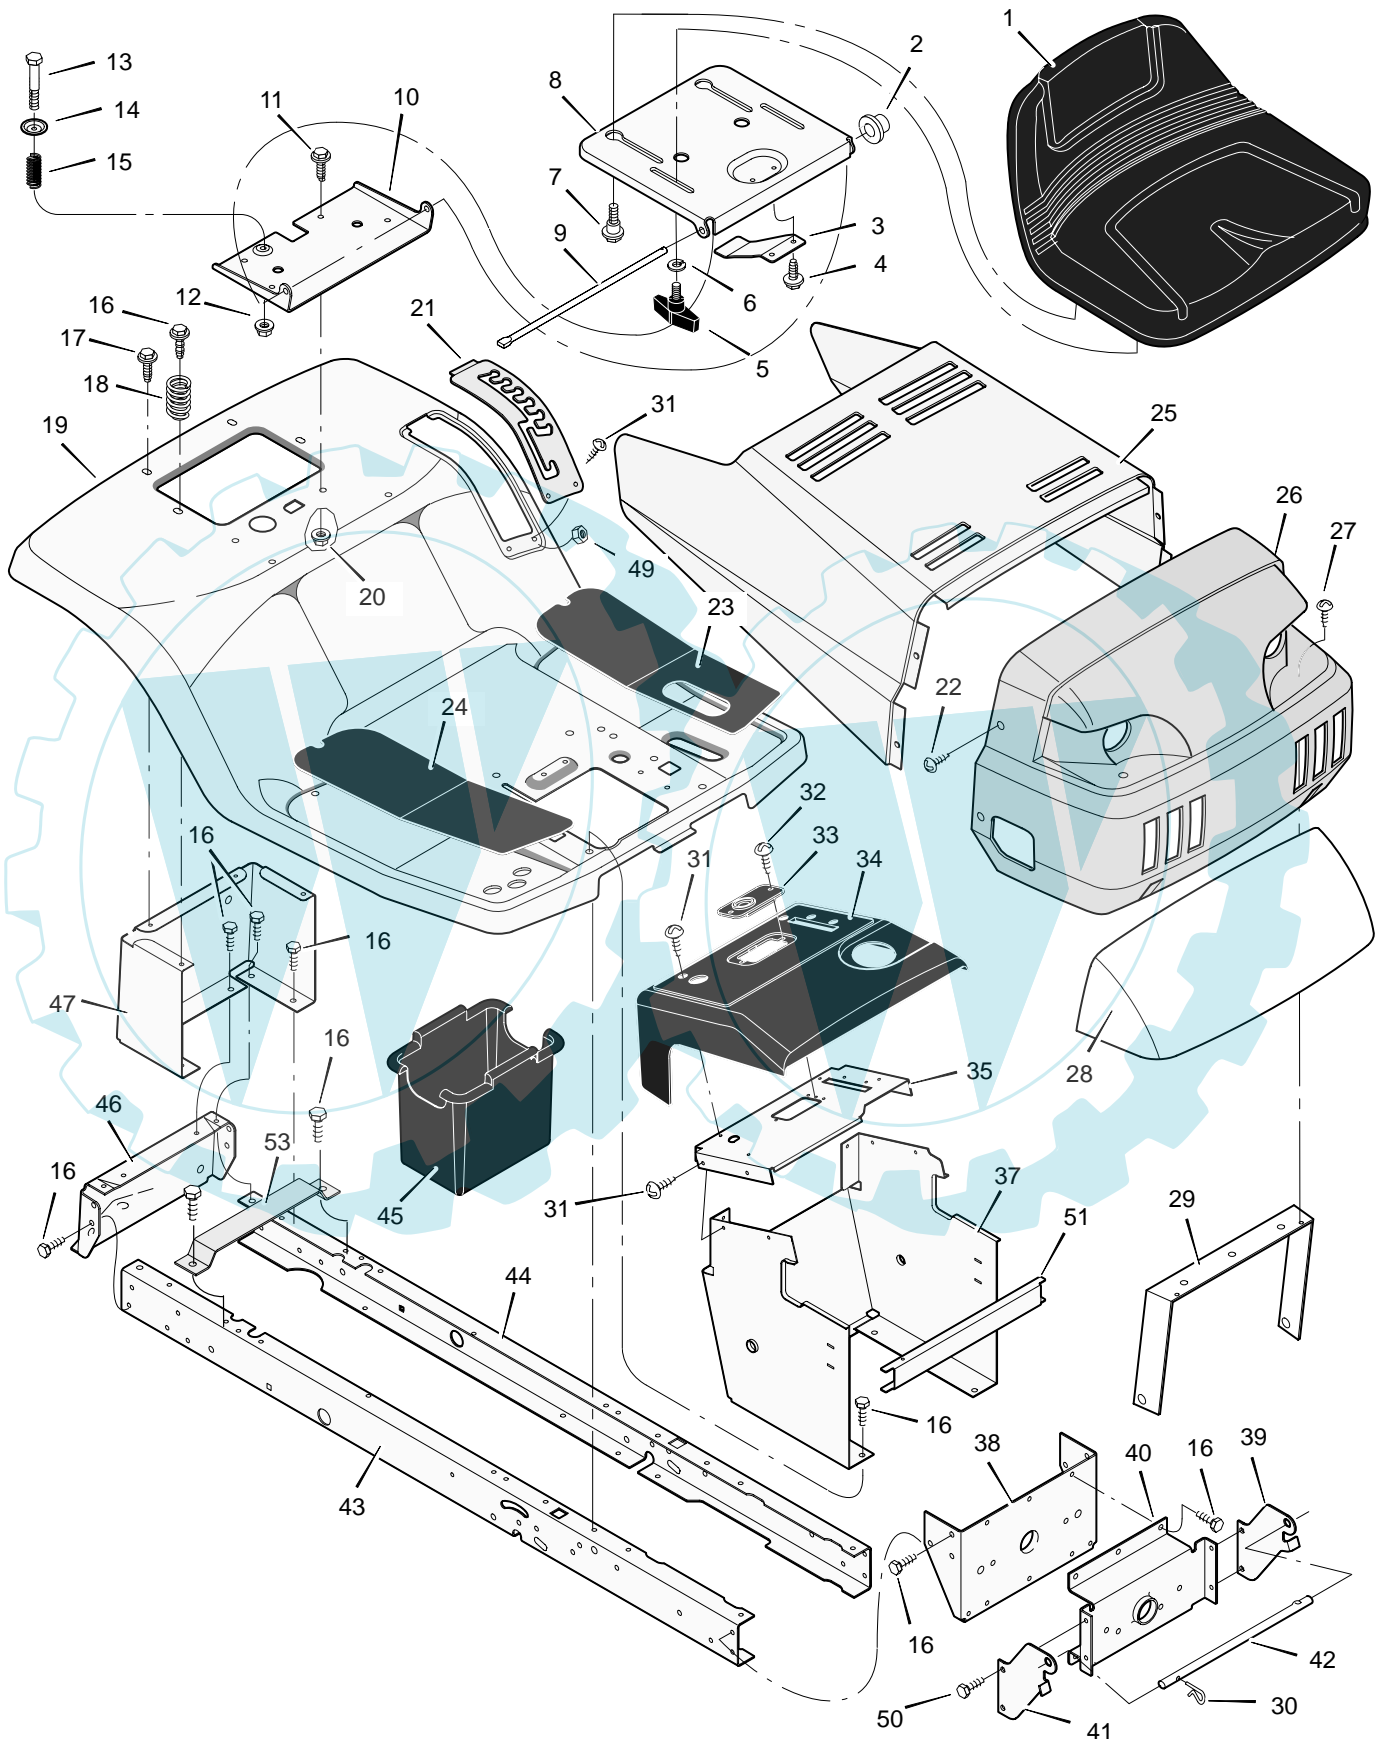


MODEL 40567x53C

REPAIR PART CHASSIS & HOOD

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Seat	1001028	27	Screw	26x239
2	Cap, Push On	028x23	28	Lens	092369
3	Spring	094057	29	Brace, Grille	092448
4	Screw	26x229	30	Pin, Hair	0031x4
5	Bolt, Wing	1001054	31	Screw	26x270
6	Washer	017x47	32	Screw	26x239
7	Bolt, Shoulder	009x56	33	Bearing, Steering	094214
8	Support, Seat	094154E701	34	Dash	094218E700
9	Rod, Pivot	094156 Z	35	Plate, Dash	094211E700
10	Bracket, Pivot	094153E700	36	Panel, Access	093007E701
11	Bolt	001x45	37	Support, Dash	095323E510
12	Nut	015x89	38	Bracket, Rear Hanger	1001270E701
13	Bolt, Shoulder	009x55	39	Support, Left Grill	690544E700
14	Washer	094155 Z	40	Axle, Hanger	094007E701
15	Spring	164x31	41	Support, Right Grill	690543E700
16	Screw	26x249	42	Rod, Pivot	092332 Z
17	Screw	26x263	43	Frame, Right	1001268E701
18	Spring	164x30	44	Frame, Left	1001269E701
19	Deck, Seat	094122E510	45	Container, Battery	690424
20	Nut	15x123	46	Plate, Hitch	1001002E701
21	Plate, Index	094829E701	47	Panel, Rear	690434E701
22	Screw	009x47	49	Nut	015x81
23	Mat, Left	094371	50	Screw	26x277
24	Mat, Right	094372	51	Channel	094215E700
25	Hood	092333E510	53	Support, Battery	690482E701
26	Grille Assembly (Includes Lens)	092367E700	—	Instruction Book	F-020767L

MODEL 40567x53C

REPAIR PART DRIVE ASSEMBLY

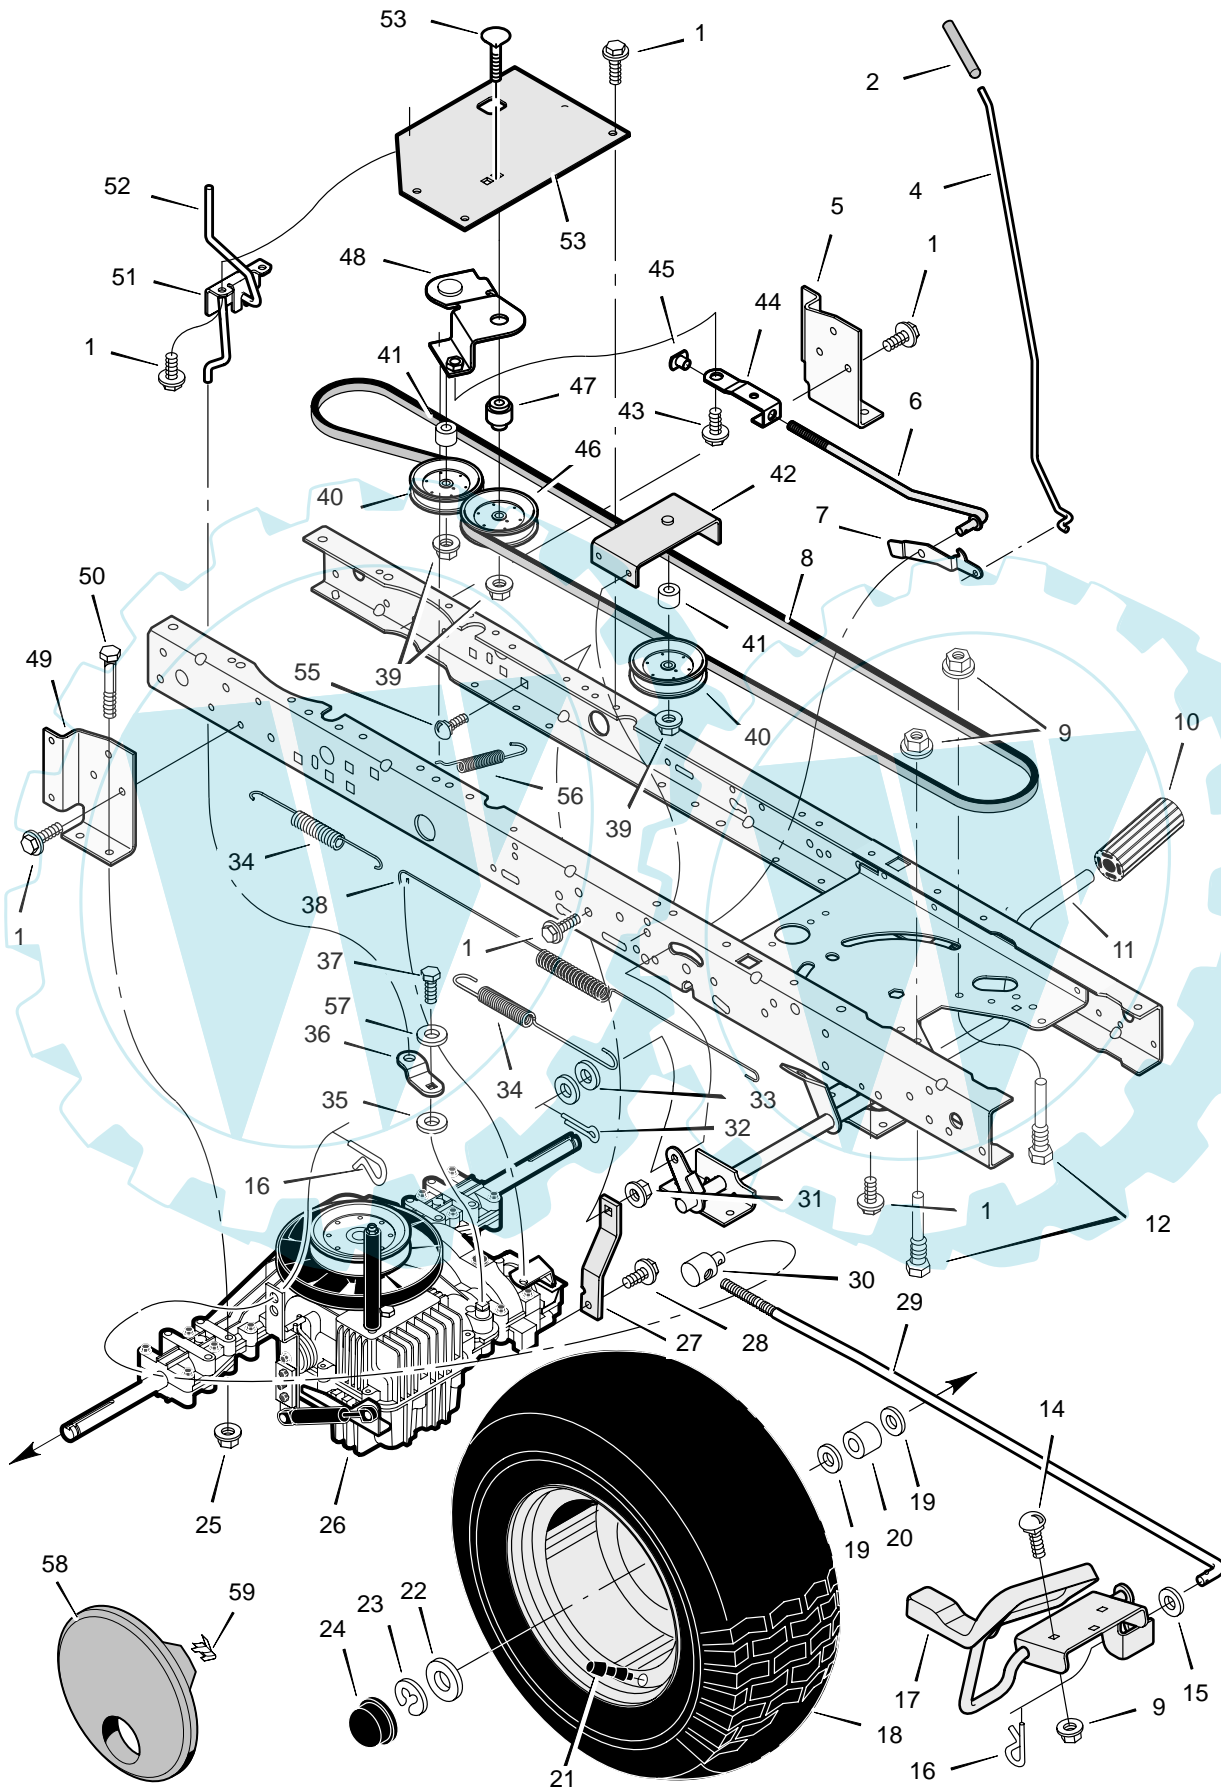

MODEL 40567x53C

REPAIR PART DRIVE ASSEMBLY


Key No.	Description	Part No.	Key No.	Description	Part No.
1	Screw	26x249	31	Nut, Centerlock	015x84
2	Grip, Parking Brake	091079	32	Pin, Cotter	030x20
4	Rod, Parking Brake	1001271 Z	33	Washer	017x48
5	Bracket, Left Transaxle	094008E700	34	Spring, Extension	165x92
6	Rod, Clutch	1001013 Z	35	Washer	17x148
7	Latch, Parking Brake	094045 Z	36	Arm, Disconnect	1001086 Z
8	V-Belt, Drive	37x106	37	Capscrew	06x105
9	Nut, Flange	015x79	38	Spring, Brake	165x150
10	Pedal, Brake/Clutch	021544	39	Locknut, Flange	015x98
11	Assembly, Brake Pedal	1001011E700	40	Pulley, Idler	690409
12	Screw, Guide	094384	41	Spacer	690369
14	Bolt, Carriage	002x53	42	Bracket, Idler Assembly	1001097
15	Washer	017x57	43	Bolt, Shoulder	009x49
16	Pin, Hair	0031x4	44	Link, Clutch	1001007 Z
17	Pedal Assembly, Hydro	095121E700	45	Nut, Tee	1001014
18	Wheel & Tire Ass'y, Rear	092294-601	46	Pulley, Idler	690410
--	Tire ONLY *	024375	47	Bushing, Pivot	1001012
--	Tube ONLY	407049	48	Arm Assembly, Idler	1001018 Z
19	Washer	17x160	49	Bracket, Right Transaxle	094008E700
20	Spacer	690554 Z	50	Bolt, Hex	01x155
21	Stem, Valve	024373	51	Bracket, Disconnect	1001214 Z
22	Washer	17x195	52	Rod, Disconnect	1001215 Z
23	E-Ring	0011x3	53	Bracket, Idler Pivot	1001108
24	Cover, Dust	094618	54	Bolt, Carriage	002x92
25	Nut, Centerlock	015x88	55	Bolt, Carriage	002x78
26	Transaxle	**	56	Spring, Clutch	165x155
27	Strap, Torque	1001085	57	Washer	017x38
28	Screw	26x216	58	Cap, Hub	334427
29	Rod, Control	1001234 Z	59	Retainer	694003
30	Nut, Adjusting	092132			

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

** For information on Replacement Parts see the Central Parts Distributor in your area.

MODEL 40567x53C

REPAIR PART
STEERING

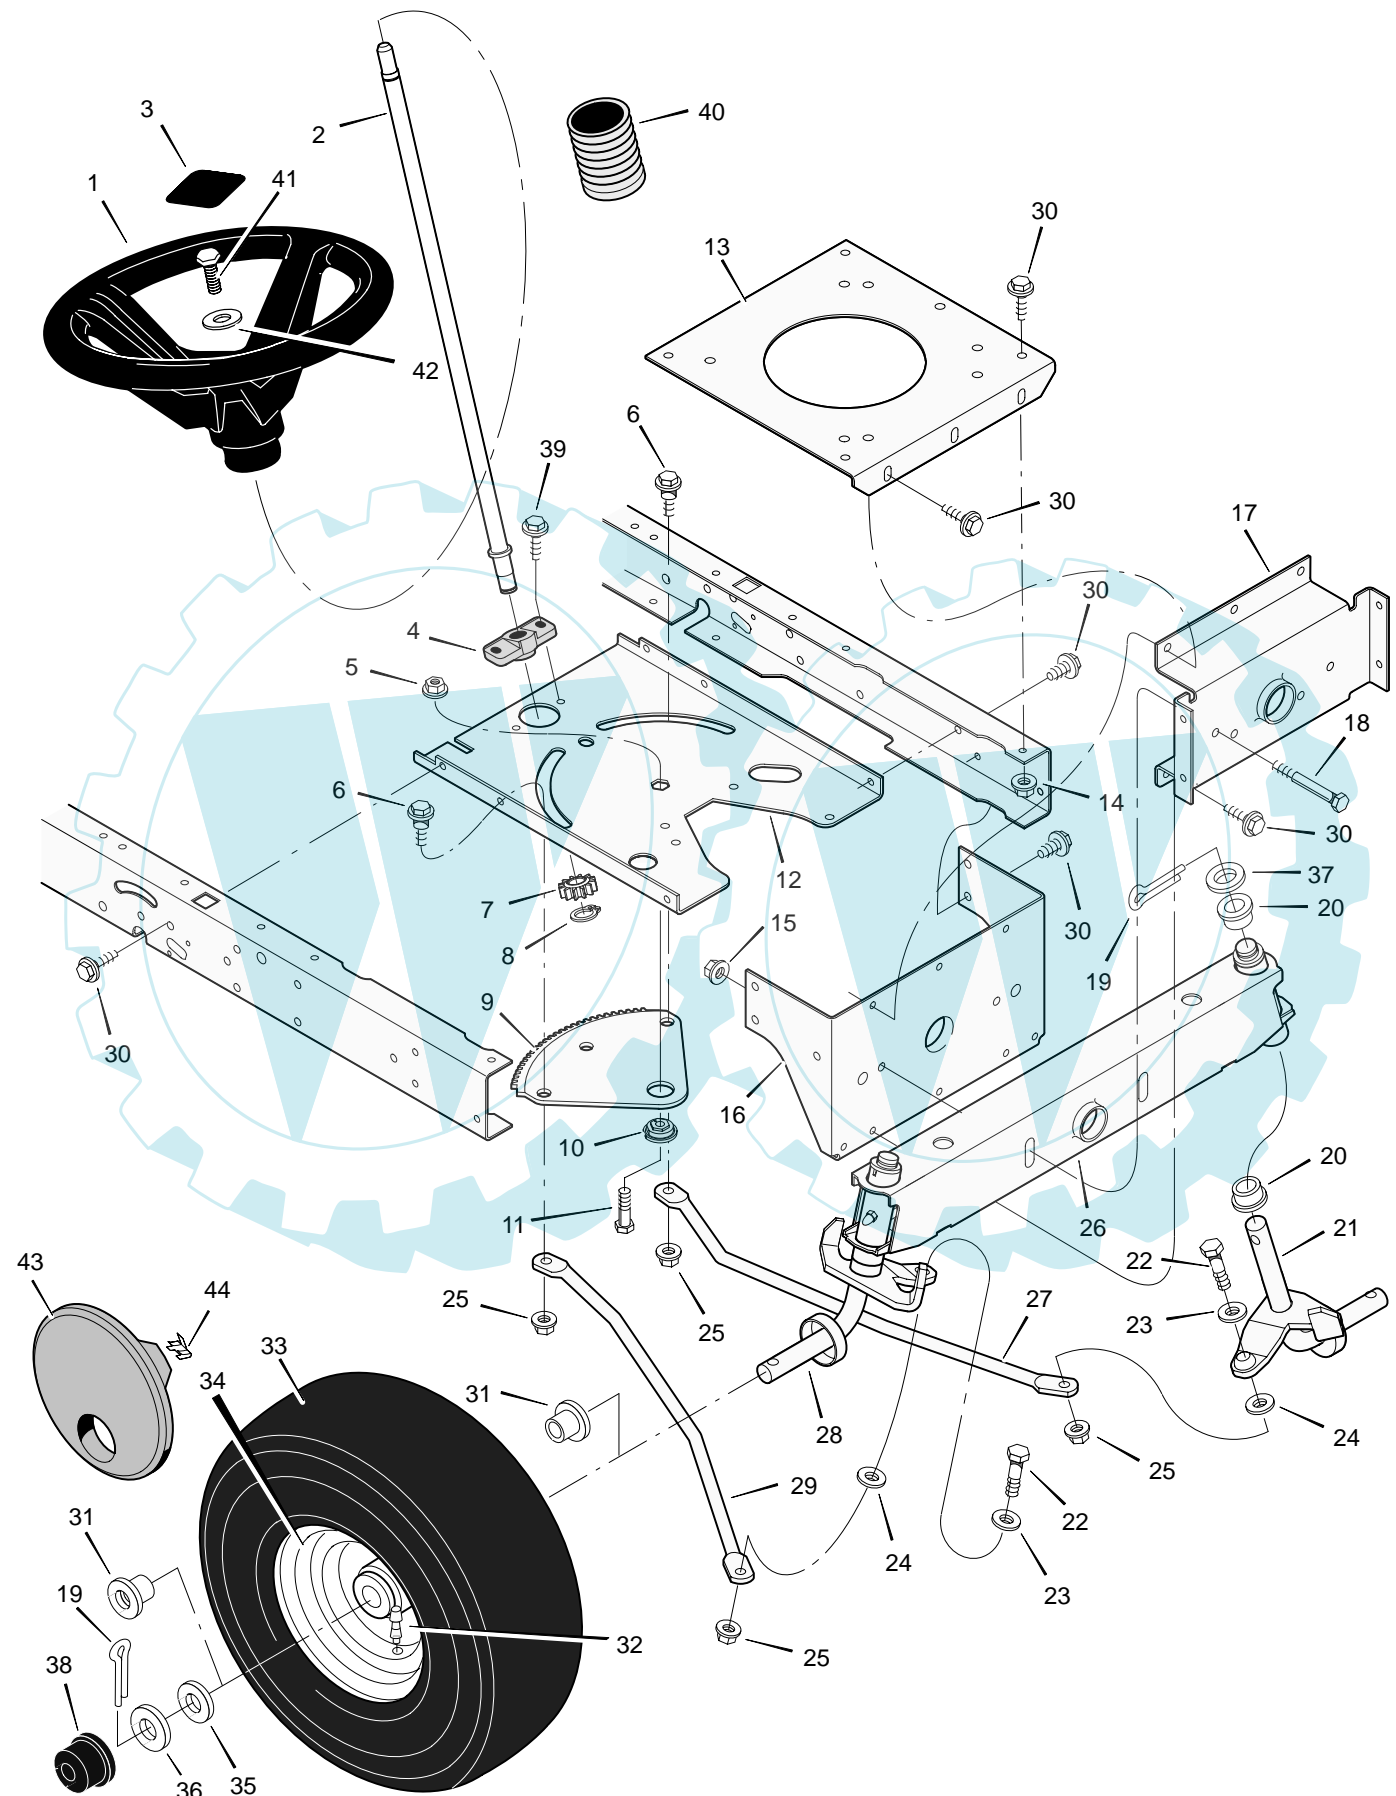

F-010740L

MODEL 40567x53C


REPAIR PART STEERING

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Wheel, Steering	095185	24	Washer	017x53 Z
2	Post, Steering	690626	25	Nut, Flange	015x84
3	Insert, Steering Wheel	711326	26	Axle Assembly	7601037
4	Bearing	094124	27	Drag Link, Left	095329E701
5	Nut, Flange	15x111	28	Spindle Assembly, Right	094575E701
6	Bolt, Shoulder	009x57	29	Drag Link, Right	095328E701
7	Gear, Pinion	690183	30	Screw	26x249
8	Ring, Snap	011x25	31	Bearing, Wheel	091334
9	Gear, Sector	094121	32	Stem, Valve	024373
10	Bearing	094123	33	Tire *	024380
11	Bolt	001x84	—	Tube	407924
12	Plate, Steering	1001121E701	34	Wheel and Tire Assembly	094581-601
13	Plate, Engine	094006E700	35	Washer	17x195
14	Nut, Flange	015x88	36	Washer	17x192
15	Nut, Flange	15x118	37	Washer	17x113
16	Bracket, Hanger	1001270E701	38	Cover, Dust	094618
17	Axle, Hanger	094007E701	39	Screw	26x267
18	Bolt	01x146	40	Bellows	054789
19	Pin, Cotter	030x49	41	Bolt	0025x3
20	Bearing	690150	42	Washer	17x146
21	Spindle Assembly, Left	094576E701	43	Cap, Hub	334429
22	Bolt	01x111	44	Retainer	694003
23	Washer	17x104			

* When you order a tire, make sure to give the brand name of the tire so that the tread pattern on the tire will match.

MODEL 40567x53C

REPAIR PART
MOWER HOUSING SUSPENSION

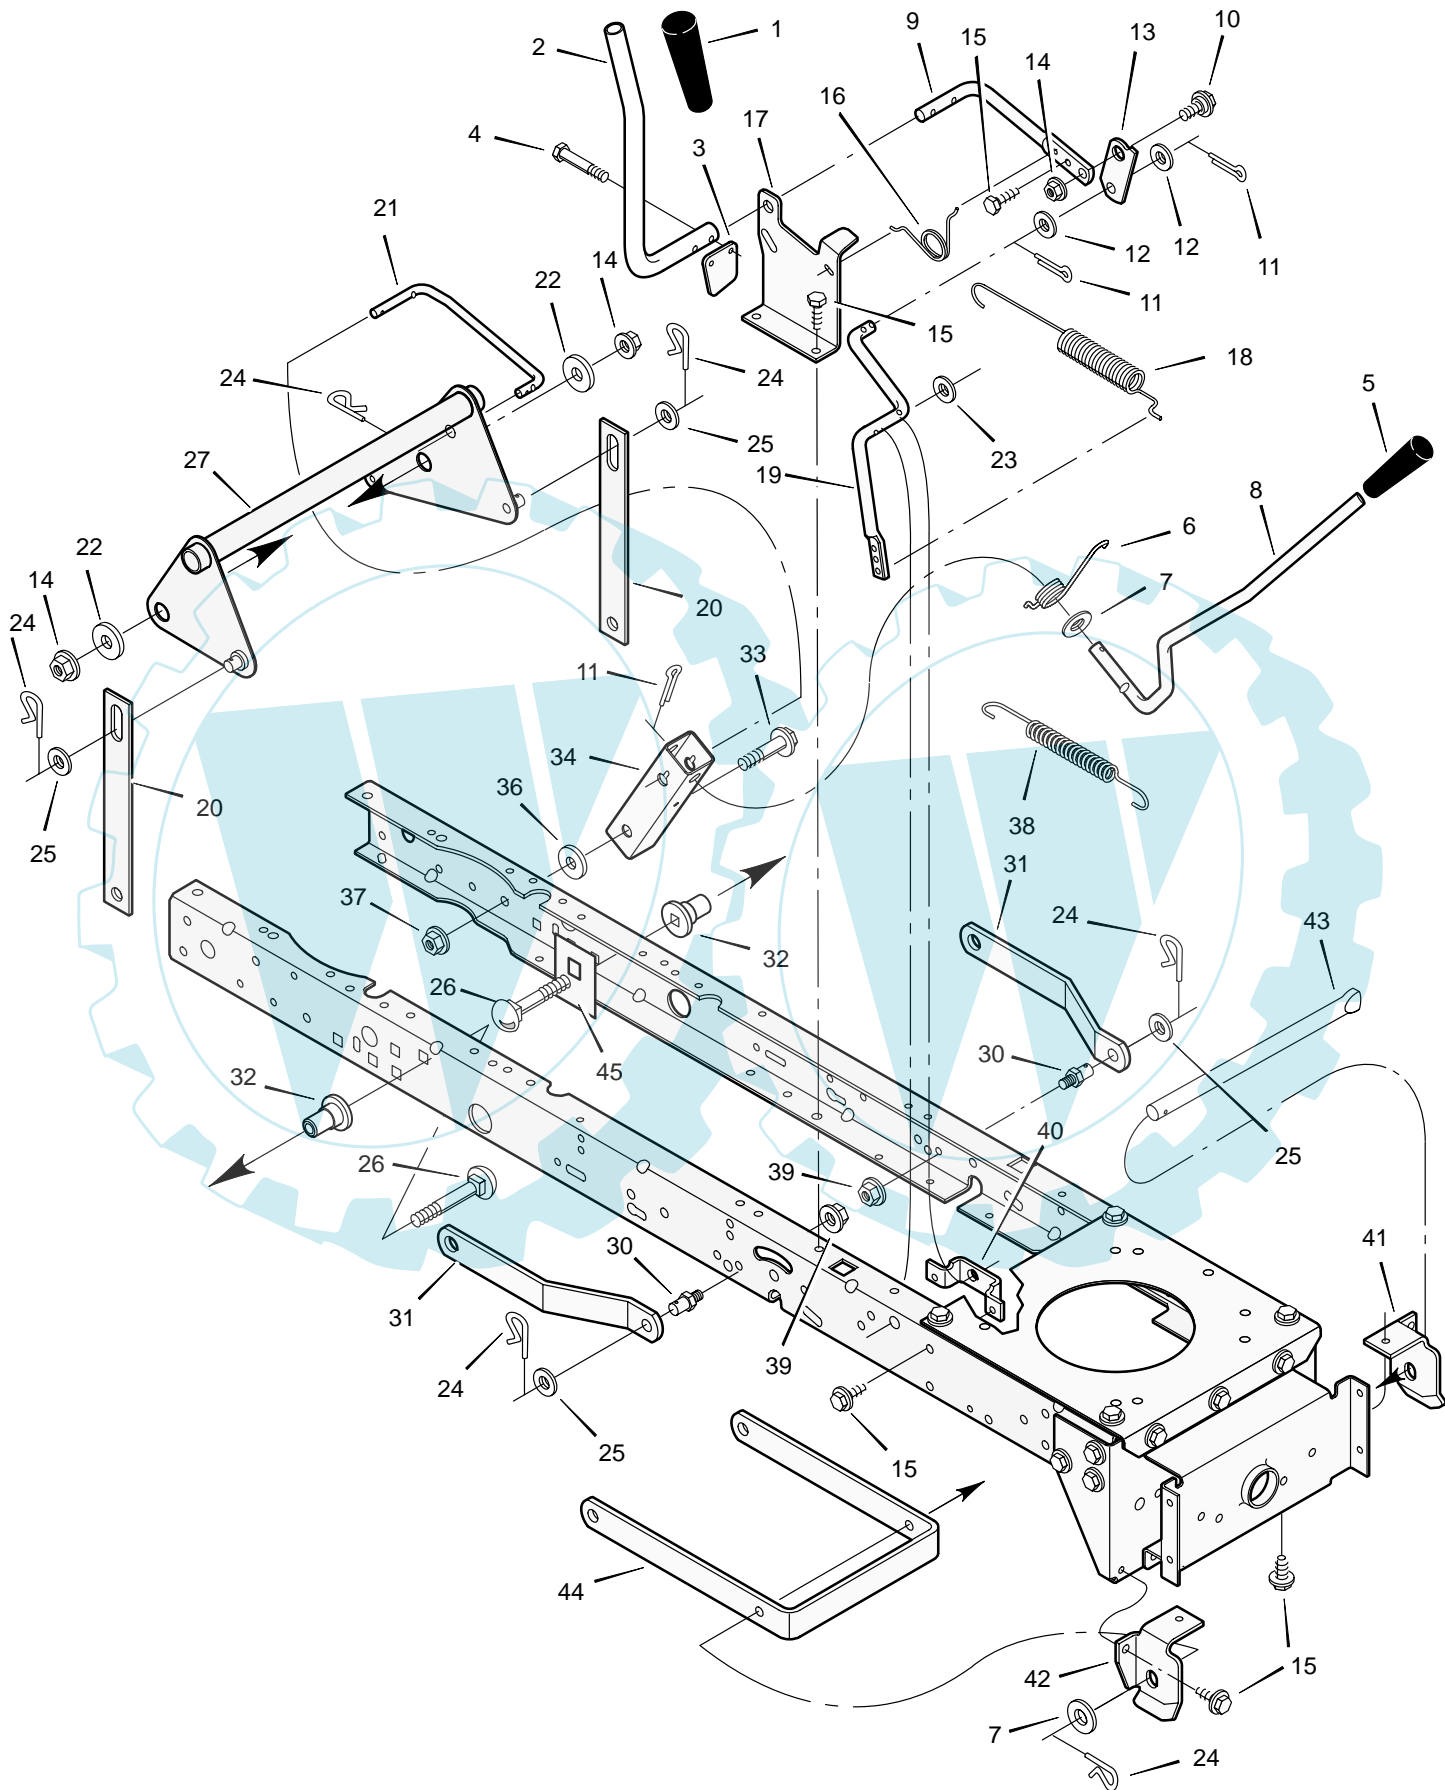


MODEL 40567x53C

**REPAIR PART
MOWER HOUSING SUSPENSION**

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Grip	092698	23	Washer	017x57
2	Handle, PTO	094346 Z	24	Pin, Hair	0031x4
3	Pad, Switch	094022 Z	25	Washer	017x91
4	Bolt	0025x3	26	Bolt, Carriage	002x85
5	Grip	092697	27	Lever Assembly, Lift	1001111E700
6	Spring	166x40	30	Pin	094067
7	Washer	17x103	31	Bracket, Rear Suspension	094055E701
8	Handle, Lift	690533	32	Spacer, Lifter	690151
9	Lever, PTO	094017 Z	33	Bolt, Shoulder	009x53
10	Bolt, Shoulder	009x39	34	Bracket, Pivot	094015E700
11	Pin, Cotter	030x20	36	Washer	17x191
13	Link, PTO	094004 Z	37	Nut, Flange	015x84
14	Nut, Flange	015x84	38	Spring	165x131
15	Screw	26x249	39	Nut, Flange	015x68
16	Spring	166x39	40	Bracket, PTO	094005E700
17	Bracket, PTO	094018E701	41	Hanger, Left Deck	094027E700
18	Spring	165x119	42	Hanger, Right Deck	094026E700
19	Crank, PTO	690394E701	43	Rod, Hanger	094158 Z
20	Link, Lift	690212E701	44	Bracket, Suspension	690539E701
21	Link, Lift Handle	690122E701	45	Plate, Stiffening	1001098E701
22	Washer	17x168			

MODEL 40567x53C

REPAIR PART MOWER HOUSING

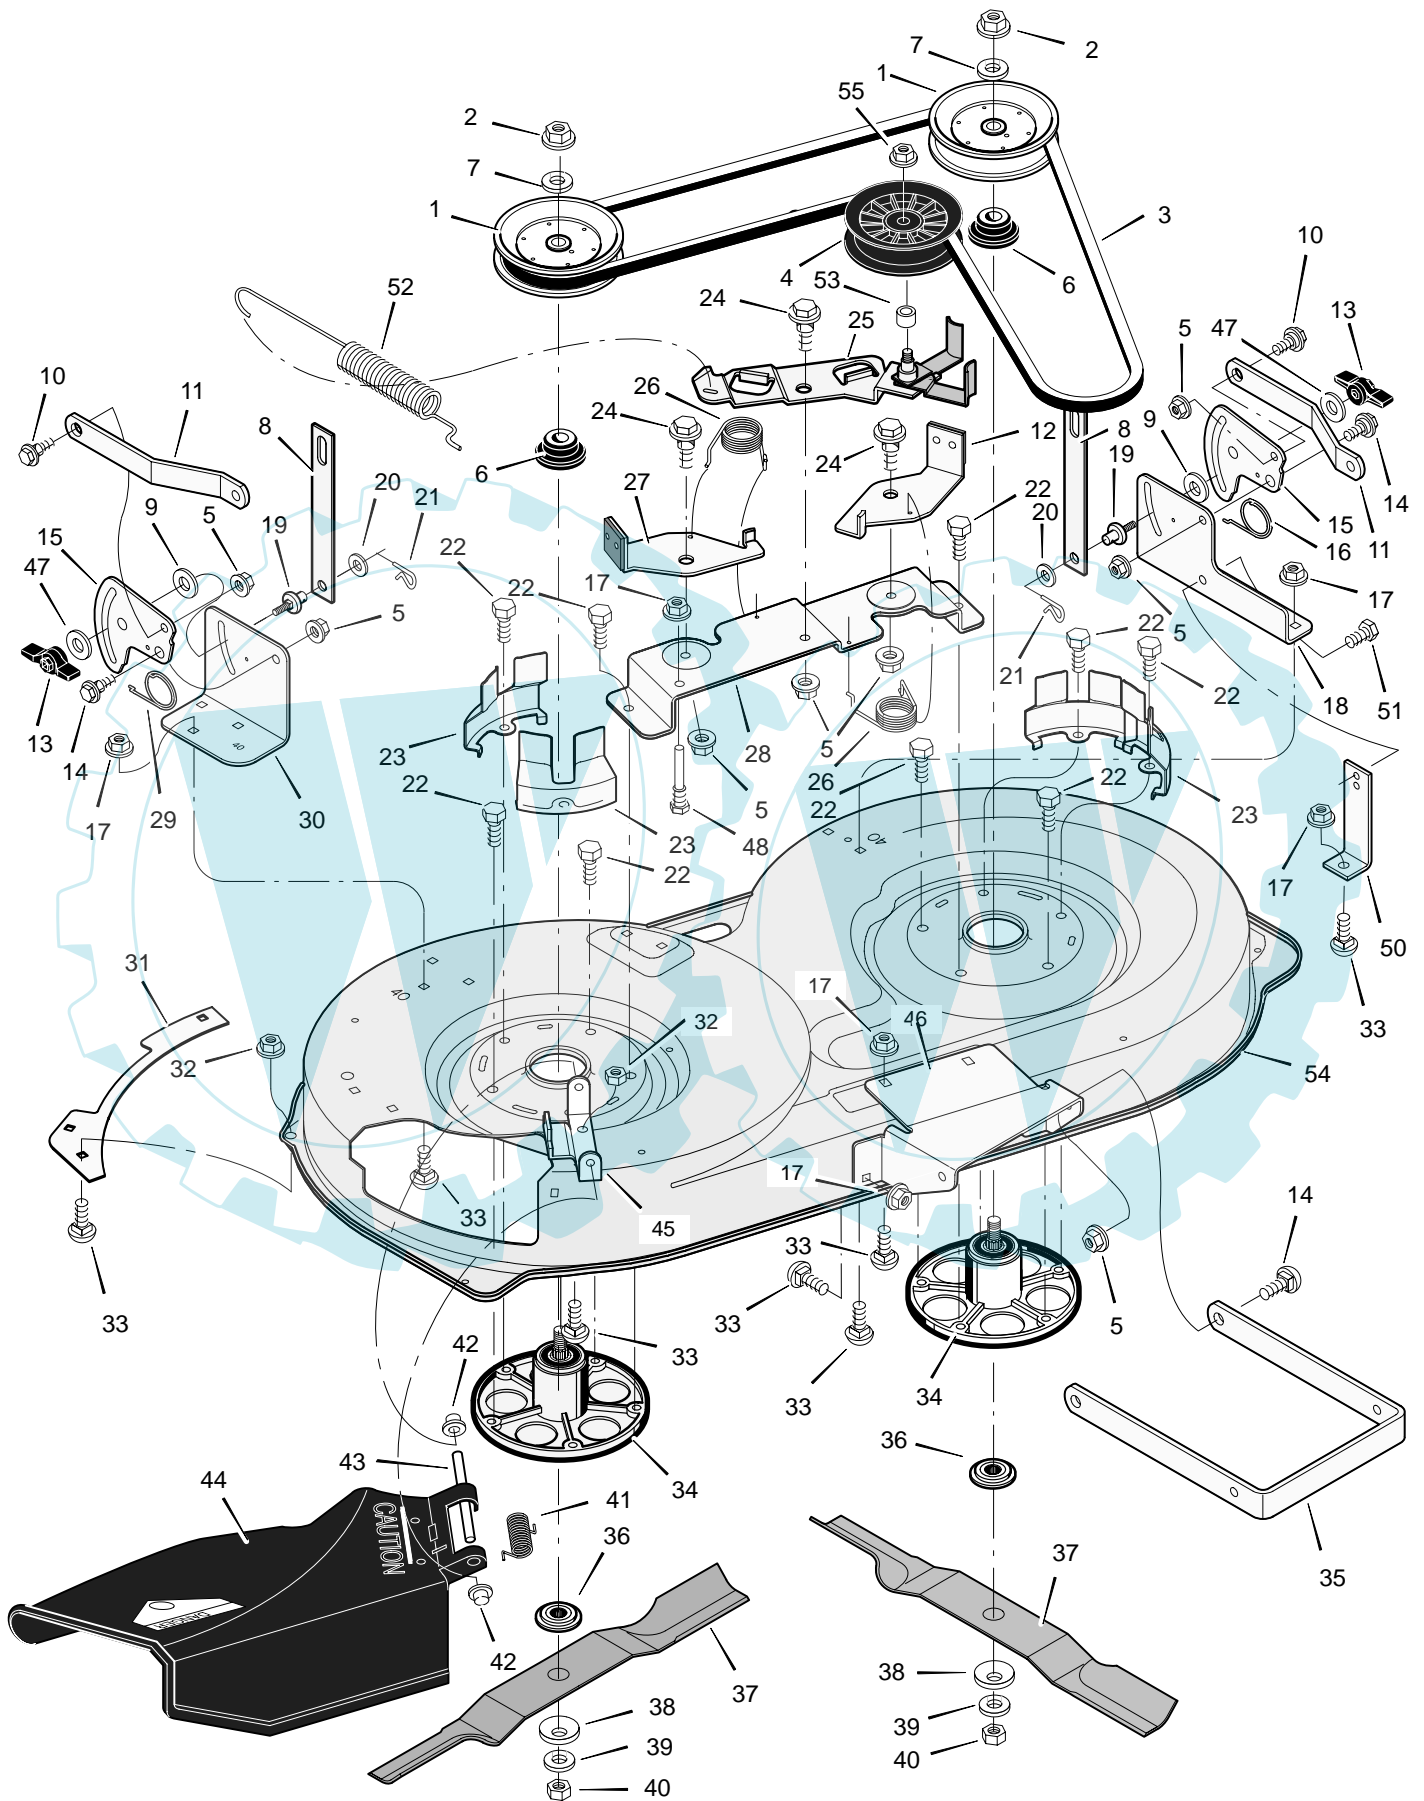

MODEL 40567x53C


REPAIR PART MOWER HOUSING

Key No.	Description	Part No.	Key No.	Description	Part No.
1	Pulley, Jackshaft	092851	29	Spring	166x42
2	Nut, Hex	15x140	30	Bracket, Suspension	094142E700
3	Belt, Mower Drive	037x62	31	Plate	091770E700
4	Pulley, Idler	690387	32	Nut, Flange	015x88
5	Nut, Flange	015x84	33	Bolt, Carriage	002x53
6	Spacer, Pulley	1001197	34	Mandrell (Includes Key No. 6)	1001200
8	Link, Lift	690212E701	35	Bracket, Suspension	690539E701
9	Pad, Friction	094137	36	Adapter, Blade	690411
10	Bolt, Shoulder	009x52	37	Blade	1001428E701
11	Bracket, Suspension	094055E701	38	Washer	17x166
12	Pad Assembly, Left Brake	094049E701	39	Washer	17x165
13	Knob	094068	40	Nut	15x100
14	Bolt, Shoulder	009x51	41	Spring	0166x4
15	Plate, Suspension	094128E700	42	Cap, Push On	028x23
16	Spring	166x43	43	Rod, Pivot	094957 Z
17	Nut, Flange	015x79	44	Deflector Assembly	094707
18	Bracket, Suspension	094143E700	45	Bracket, Deflector	094956E701
19	Pin, Hanger	095194	46	Bracket, Front Hanger	094144E700
20	Washer	017x91	47	Washer	017x45 Z
21	Pin, Cotter	0031x4	48	Guide, Belt	094781
22	Bolt	0025x7	50	Bracket, Support	094681E700
23	Cover, Pulley	094051E701	51	Screw	26x249
24	Bolt, Shoulder	009x39	52	Spring, Extension	165x119
25	Arm, Idler	690408E700	54	Housing, Blade *	094141E700
26	Spring	0166x41	55	Nut, Flange	015x98
27	Pad Assembly, Right Brake	094047E701	1-55	Complete Mower Housing Assembly	776001
28	Bracket Assembly, Brake	094145E700			

* Includes Key No. 17, 18, 30, 31, 32, 33, 45, 46, 47 and 51.

MODEL 40567x53C

REPAIR PART ENGINE MOUNT

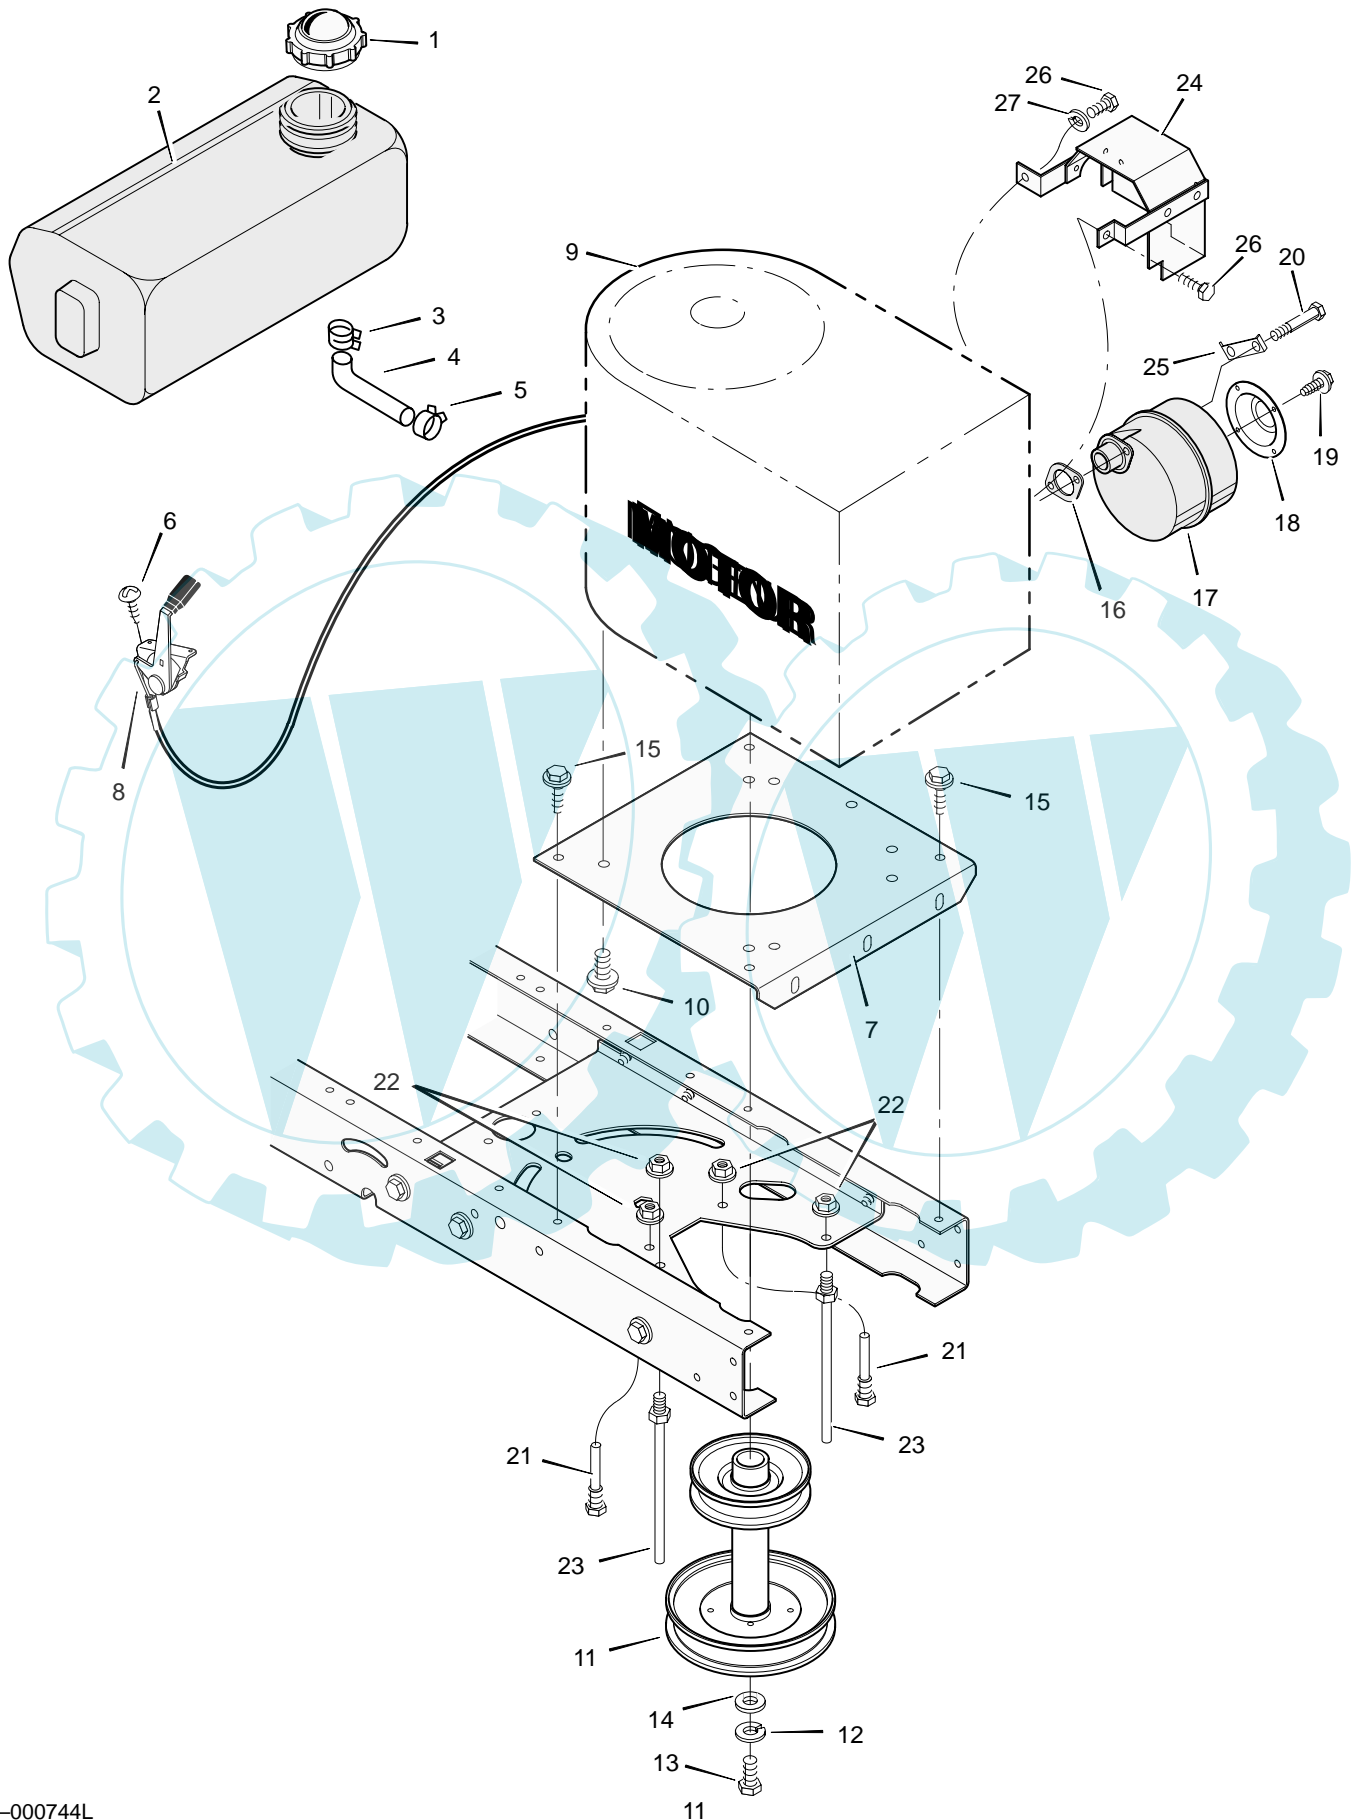

MODEL 40567x53C


REPAIR PART ENGINE MOUNT

Key No.	Description	Part No.
1	Fuel Cap	092317
2	Fuel Tank	092342
3	Hose Clamp	095197
4	Fuel Line	7601033
5	Hose Clamp	095197
6	Screw	26x201
7	Plate, Engine	094006E700
8	Throttle Control	092371
9	Engine*	—
10	Bolt, Engine Mount	0025x7
11	Stack Pulley Assembly	690439 Z
12	Lockwasher	019x35
13	Bolt, Hex	01x140
14	Washer	018x32
15	Screw	26x249
16	Gasket	091309
17	Muffler	091271
18	Deflector, Muffler	094099 Z
19	Screw	26x208
20	Bolt, Hex	01x134
21	Guide, Belt	094384
22	Nut, Flange	015x79 Z
23	Guide, Belt	094066
24	Shield, Heat	092381
25	Lock, Screw	092378
26	Screw	26x263
27	Washer	018X32

* Parts are available from an engine Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.

MODEL 40567x53C

REPAIR PART ELECTRICAL SYSTEM

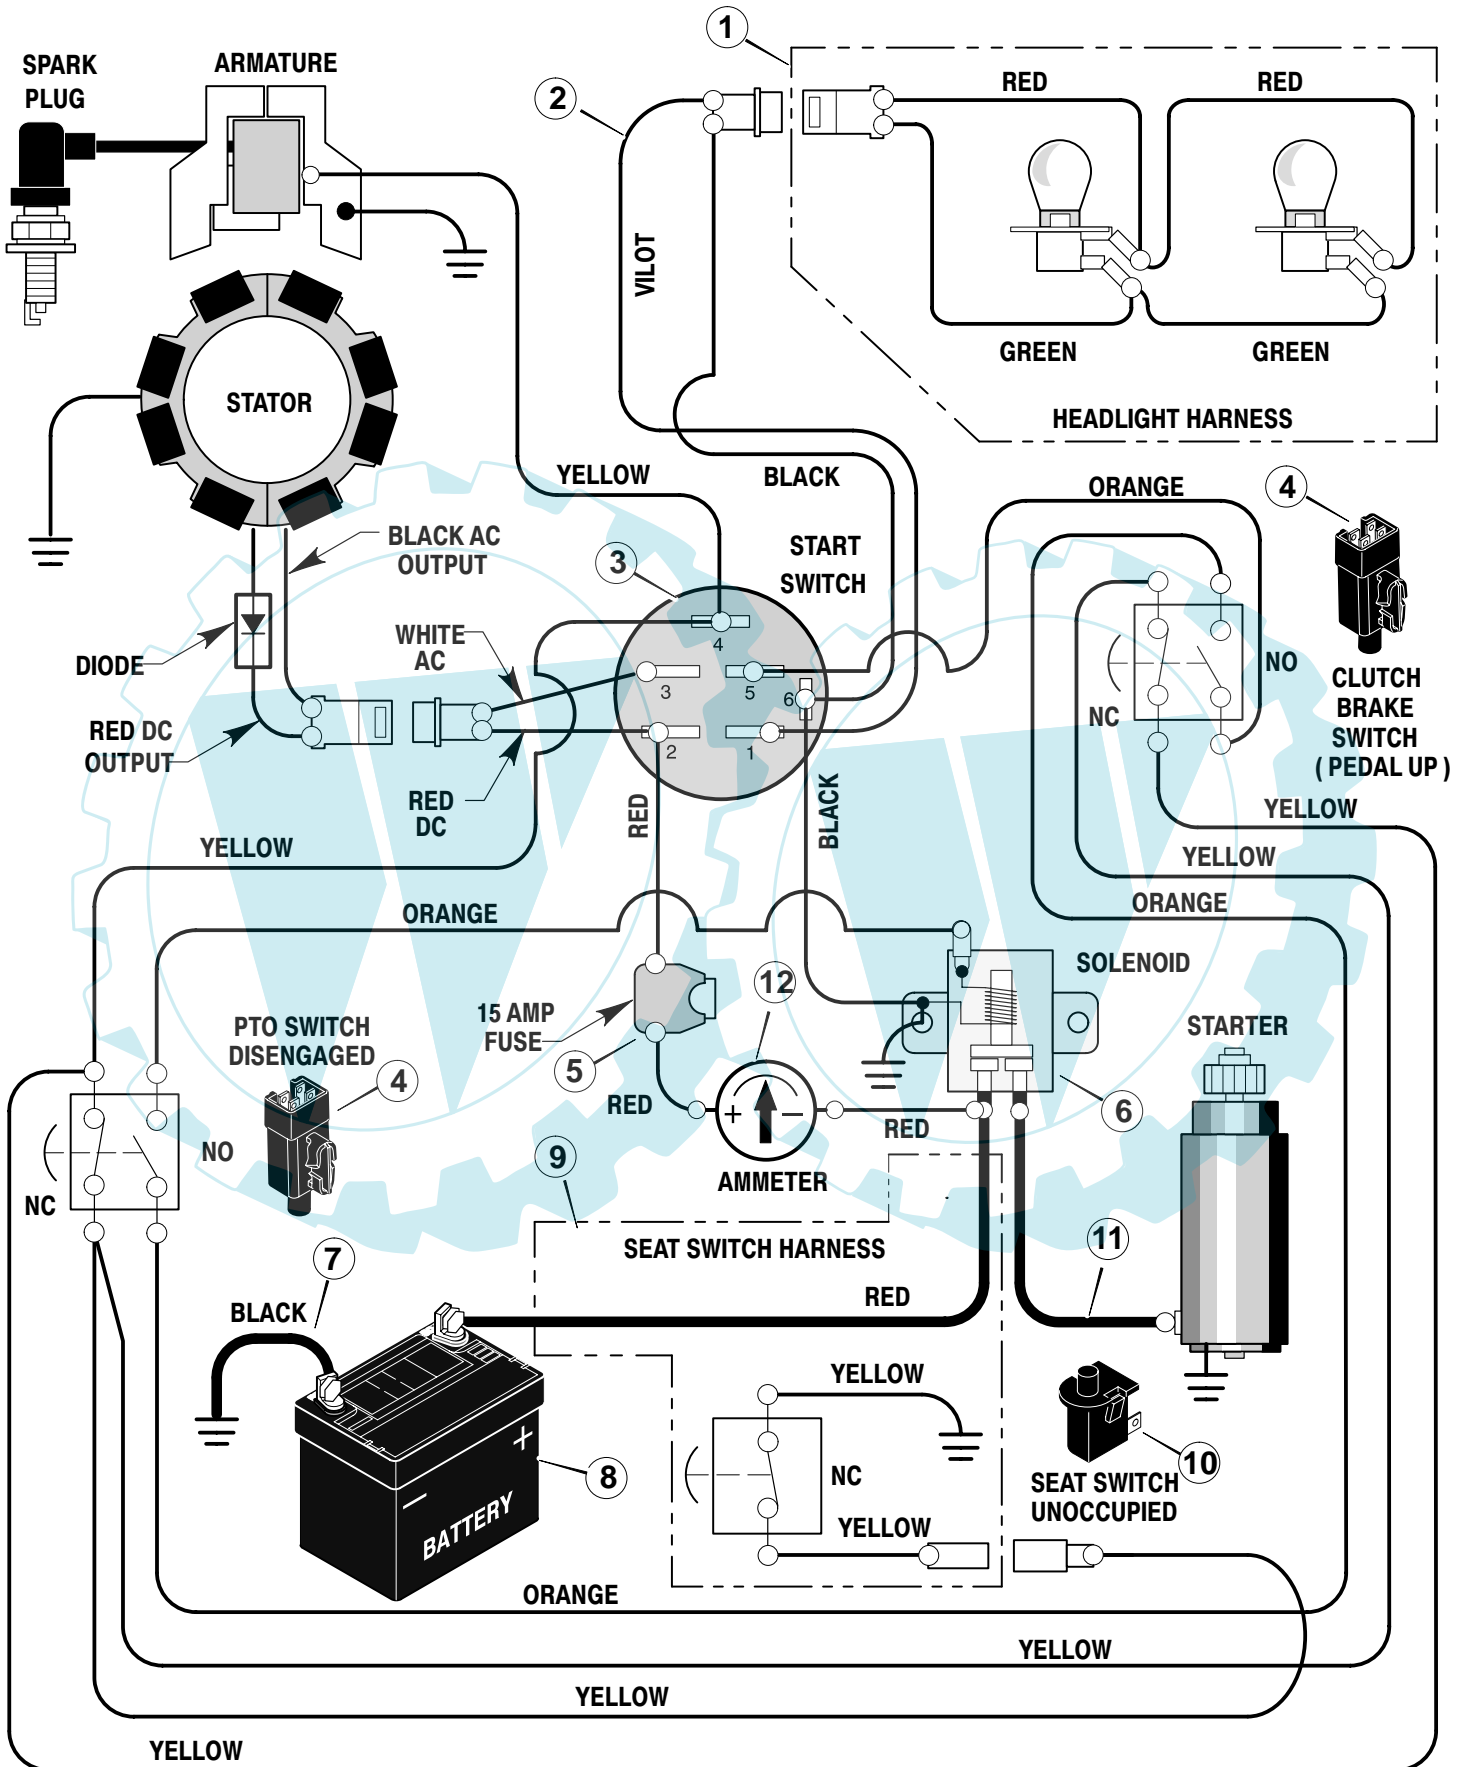

MODEL 40567x53C

REPAIR PART ELECTRICAL SYSTEM

Key No.	Description	Part No.
1	Harness, Light Wire	250x92
	Socket, Light	092372
	Bulb, Light	090084
2	Harness, Chassis Wire	250x86
3	Switch, Ignition	092377
	Key, Ignition	020729
	Nut, Hex	091489
	Cap, Ignition	091488
4	Switch, Limit	094136
5	Fuse	302031
	Holder, Fuse	407078
6	Solenoid	094613
	Screw, Mounting	26x229
	Locknut	15x116
7	Cable, Battery Ground	024x32
	Screw, Ground Cable	26x213
8	Battery	021075SE
	Bolt, Carriage	002x82
	Wingnut	014x79
9	Harness, Seat Switch Wire	250x67
10	Switch, Seat Sensor	094159
11	Cable	024x31